SHARP Service Manual

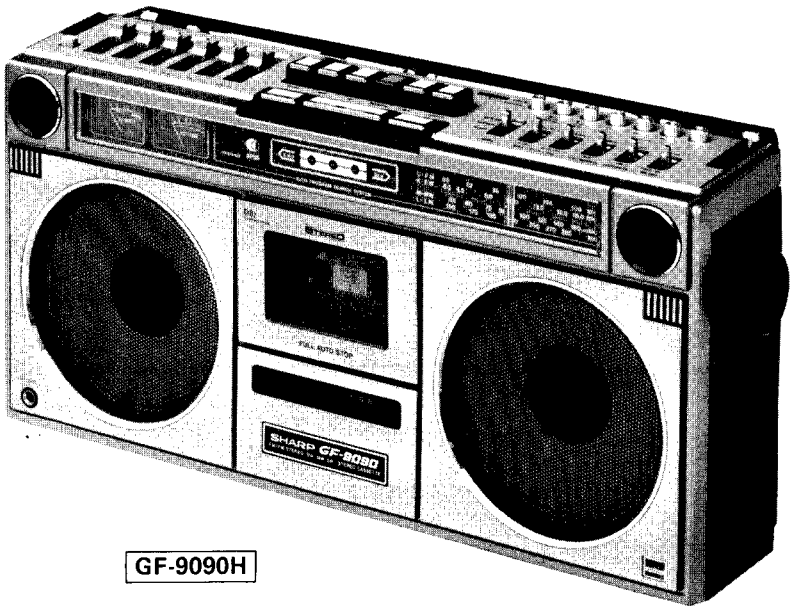

GF-9090H

APSS
Auto Program Search System

MODEL
GF-9090H (Silver Panel)
GF-9090HB (Black Panel)
GF-9090E

In the interests of user-safety the set should be restored to its original condition and only parts identical to those specified be used.

SPECIFICATIONS

GENERAL

Type:	Portable stereophonic cassette tape recorder with built-in LW/MW/SW/FM 4-band radio
Power source:	AC 110/220/240V, 50/60 Hz (H, HB) AC 240V, 50/60 Hz (E) DC 12V (Eight UM/SUM-1 batteries or External DC supply)
Power consumption:	24 watts
Speaker:	16cm (Woofer) x 2, Horn type (Tweeter) x 2
Power output:	MPO 8000 mW (DIN 45 324) (H, HB) MPO 11W (E): AC operation RMS power 7000 mW (3500 mW + 3500 mW : DC operation)
Semiconductors:	5-IC (Integrated Circuit), 47-transistor and 37-diode (4 Light Emitting Diode)
Dimensions:	485mm(W) x 115mm(D) x 240mm(H)
Weight:	5.8 kg (without batteries)
Input terminals:	1 EXT. MIC. 600 ohms (J201, J202) 2 Remote control (J302) 3 EXT. DC power, 12V (J701) 4 AC input power (SO701) 5 REC/PB DIN socket, 2.5 mV/10K ohms (SO202) 6 FM EXT. Antenna (SO1)
Output terminals:	1 EXT. speaker, 4 ~ 8-ohms (SO301, SO302) 2 PHONES : 4 ~ 8 ohms (J301) 3 REC/PB DIN socket, 1V/50K ohms (SO202)

TAPE RECORDER SECTION

Type:	4-track stereo cassette tape recorder
Tape:	Philips type compact cassette tape
Tape speed:	4.8 cm/sec.
Recording system:	AC bias
Erasing system:	DC erasing
Recording time:	60 minutes (with C-60 tape)
Fast forward or rewind time:	120 sec. (with C-60 tape)
Frequency response:	40 ~ 15,000 Hz (CrO_2 tape) 40 ~ 12,000 Hz (Normal tape)
Wow and flutter:	0.3% (DIN 45 511) (H, HB) 0.15% (WRMS) (E)
S/N ratio:	50 dB

RADIO SECTION

Frequency range:	LW	150 ~ 285 kHz
	MW	520 ~ 1,620 kHz
	SW	5.95 ~ 18 MHz
	FM	87.6 ~ 108 MHz
Intermediate frequency:	LW/MW/SW 455 kHz FM 10.7 MHz	
Circuit system:	4-band superheterodyne system	
Antenna:	LW/MW ferrite core bar antenna SW/FM telescopic antenna FM EXT. antenna	

SHARP CORPORATION OSAKA, JAPAN

NAMES OF PARTS (Refer to Figure 1)

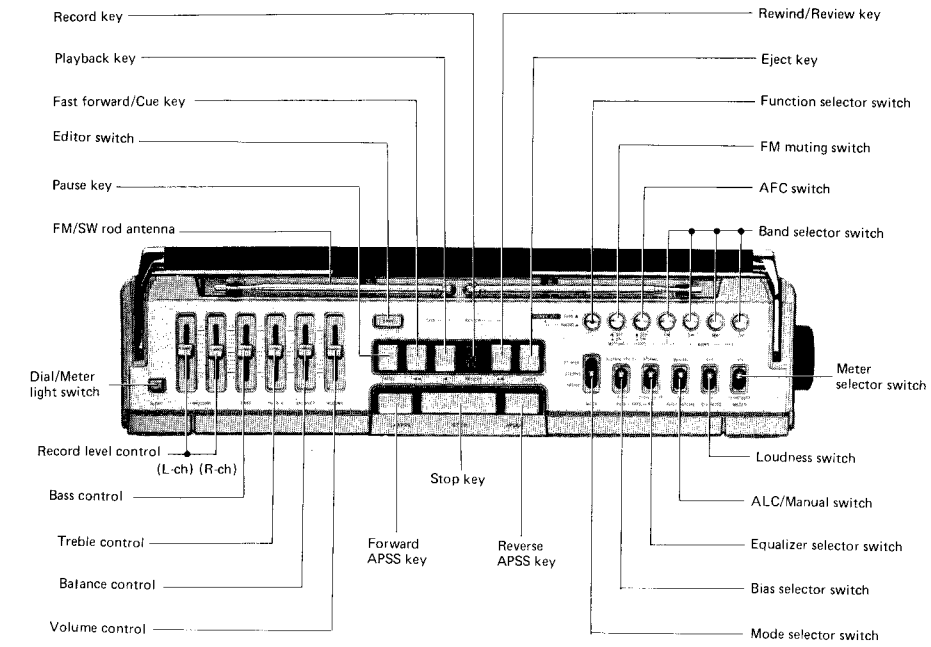

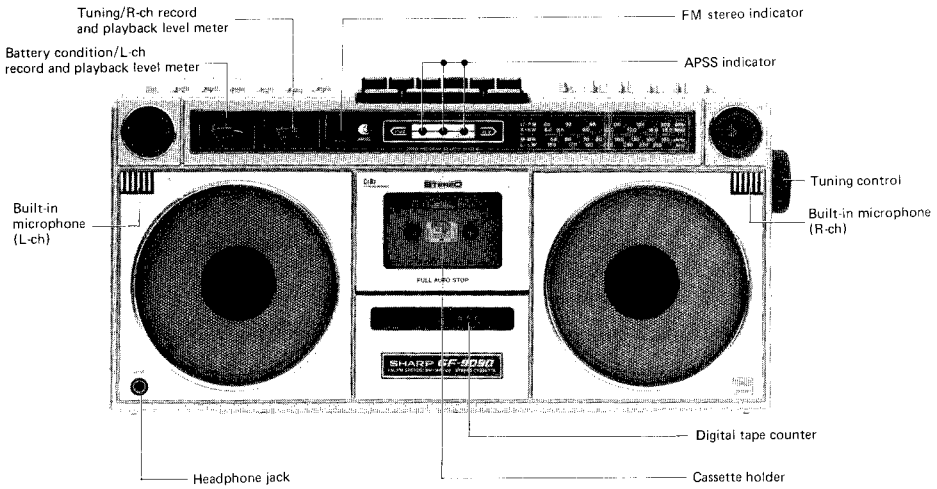

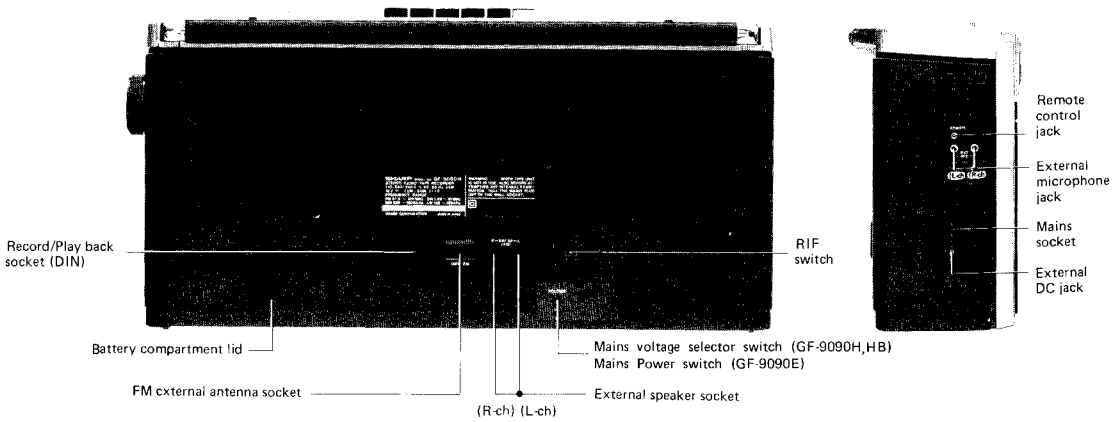

Figure 1

DISASSEMBLY

A → B → C → D → E

A FRONT CABINET REMOVAL (Refer to Figures 2 and 3)

1. Pull out the power cord plug or adaptor plug from the unit.
2. Take out the cassette tape from the cassette holder.
3. Remove the battery compartment lid and eight (8) batteries from the battery compartment.
4. Remove eight (8) screws retaining the front cabinet.
5. Gently pull out the front cabinet and disconnect four (4) tips (Speaker) connected to the main P.W. board.

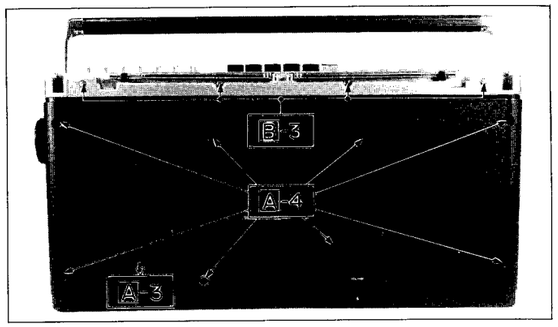

Figure 2

B OPERATION PANEL REMOVAL (Refer to Figure 2)

1. Remove the front cabinet as described in front cabinet removal.
2. Remove six (6) knobs (VOLUME, BALANCE, TREBLE, BASS and RECORD).
3. Remove four (4) screws retaining the operation panel.
4. Gently lift up the operation panel from the back cabinet.

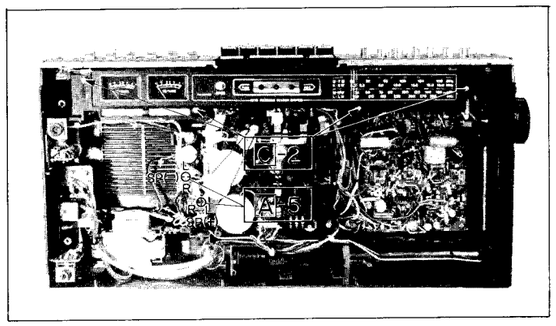

Figure 3

C DIAL SCALE PLATE REMOVAL (Refer to Figure 3)

1. Remove the operation panel as described in operation panel removal.
2. Remove four (4) screws retaining the dial scale plate.
3. Gently pull out the dial scale plate from the chassis.

D MECHANISM BLOCK REMOVAL (Refer to Figure 4)

1. Remove the dial scale plate as described in dial scale plate removal.
2. Disconnect the tip (Muting) and two (2) sockets (SO2, SO501) connected to the main P.W. board and the motor P.W. board.
3. Remove four (4) screws retaining the mechanism block.
4. Gently pull out the mechanism block form the back cabinet.

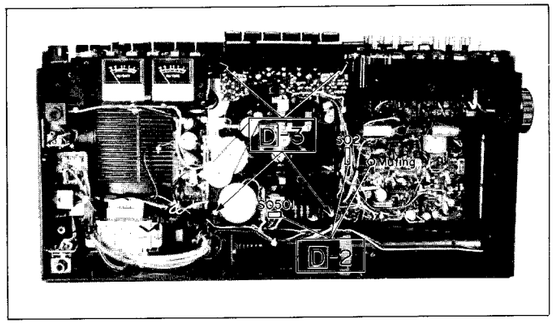

Figure 4

E CHASSIS (P.W.B.) REMOVAL (Refer to Figure 5)

1. Remove the mechanism block as described in mechanism block removal.
2. Remove the tuning knob from the tuning shaft.
3. Disconnect two (2) tips (Antenna) connected to the main P.W. board.
4. Remove six (6) screws retaining the chassis (P.W.B.).
5. Gently pull out the chassis (P.W.B.) from the back cabinet.

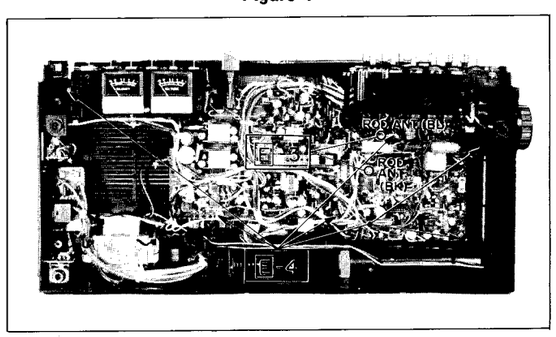

Figure 5

OPERATION ON MAINS

GF-9090H, HB

- Before operating the unit on mains, check the pre-set voltage. If the voltage is different from your local voltage, adjust the voltage as follows: Rotate the plug of the voltage selector by using a screwdriver so that your local voltage number can be seen. (Refer to Figure 6)

GF-9090E

- Switch the mains power switch to the "ON" position.
- When the unit is used on batteries, pull out the mains plug from the unit. Otherwise switch off at the mains power switch after use. (Refer to Figure 6)

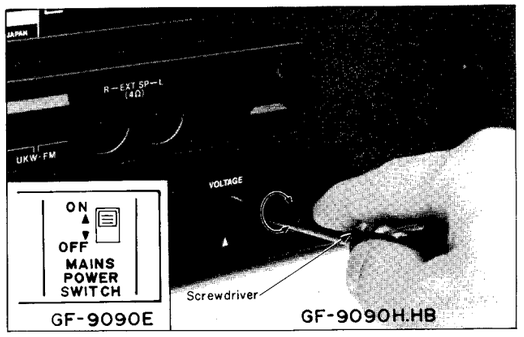

Figure 6

DIAL CORD STRINGING

(Refer to Figure 7)

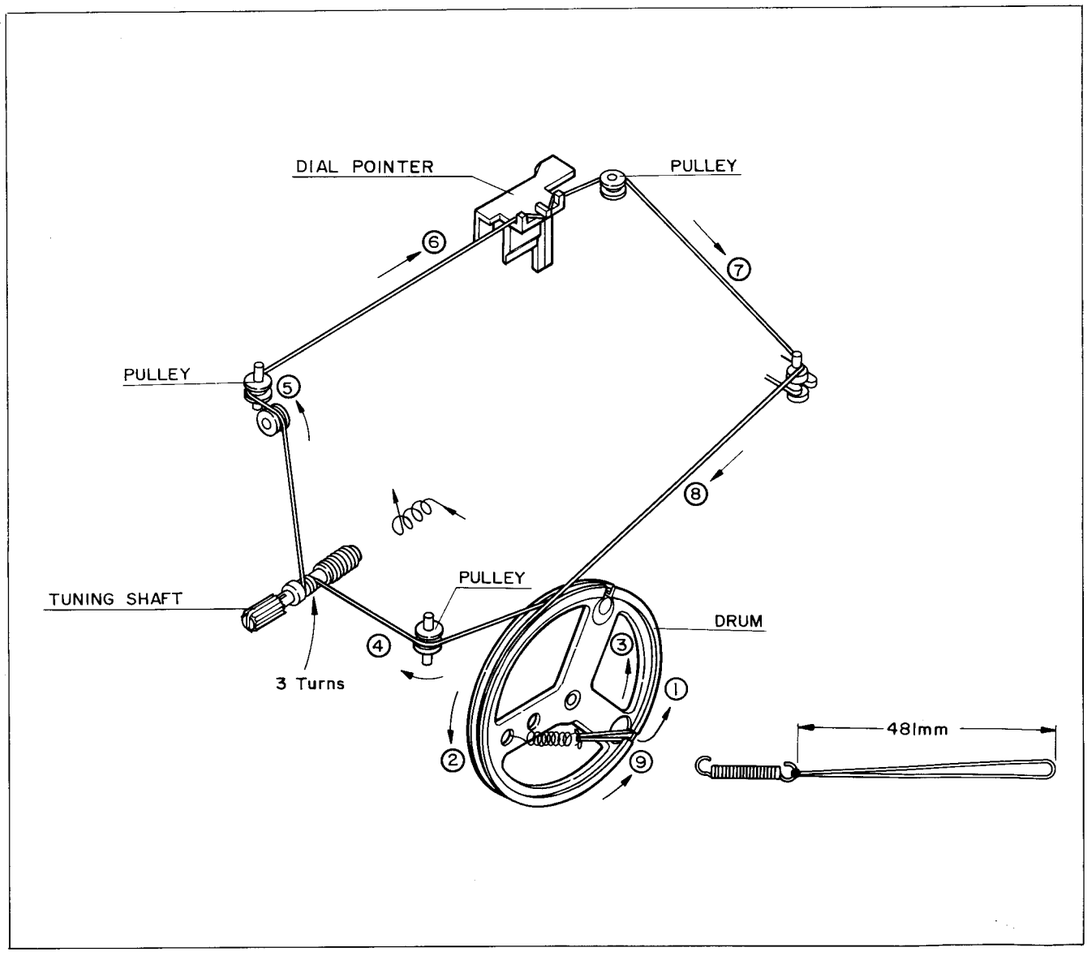

Figure 7

DESCRIPTION OF APSS

APSS is the abbreviation of Automatic Program Search System that permits advancing the tape past an unwanted selection to the beginning of the next program automatically with one push of a key. In this machine, the APSS in the reverse direction is also realized besides that in the forward play. That is to say, this unit is equipped FWD.-APSS key (◀) and REV.-APSS key (▶). In playback mode when the FWD.-APSS key is depressed the tape is fed at a high speed and is slowed down to a regular play speed at the beginning of the next selection. Or, when the REV.-APSS key is depressed the tape is rewound at a high speed and is set to regular playback mode at the beginning of the selected program. The following explanation refers to the function of the APSS.

FUNCTION OF APSS

When the FWD.-APSS key is depressed in playback mode of the tape, the pinch roller is cleared from the flywheel shaft and the roller assembly meshes with the gear of the take-up turntable permitting the tape to advance at a normal fast forward speed. On the other hand, when the FWD.-APSS key is depressed, the FWD.-APSS switch (SW501) is turned "ON" so that +12V power be applied, via D509, to the APSS indicator circuit ① , muting circuit ② and APSS detection circuit ③ .

① APSS INDICATOR CIRCUIT

(Refer to Figures 8, 9, 10 and 11)

With the APSS indicator circuit being given +12V power, the multi-vibrator (Q502 and Q501) starts to oscillate to n Hz (about 2 Hz) and output of the multi-vibrator will be applied to the flip-flop circuit (Q503 and Q504) to be 1/2 divided into 1/2n Hz (about 1 Hz). These outputs of the multi-vibrator and flip-flop circuit are to light up the light emitting diodes D513, D512 and D511 through the logical circuit (D501 to D506). Figure 10 is a timing chart concerning the above operation.

In Figure 10, 1) and 2) are output waveformes of the multi-vibrator (Q502 and Q501), and 3) and 4) are those of the flip-flop circuit (Q503 and Q504). Using these four (4) waveforms, the logical circuit is to further create waveforms 5), 6) and 7) to have the light emitting diodes light up.

The horizontal axis shown in Figure 10 refers to a time axis: the light emitting diodes D513, D512 and D511 light up in this order one after another, respectively at the periods a, b and c. Meanwhile, at the period d, all the light emitting diodes are kept off. The periods a to d are considered one cycle of the light-up operation and this cycle is repeated: the light-up operation looks as if it moved from right to left.

Q505 and Q506 are switching transistors. When the FWD.-APSS key is depressed, the Q505 will be turned "ON" while the Q506 will do so when the REV.-APSS key is depressed. As for the REV.-APSS operation mode, the light emitting diodes D511, D512 and D513 light up in this order one after another, respectively at the periods a, b and c --- the light-up operation looks as if it moved from left to right.

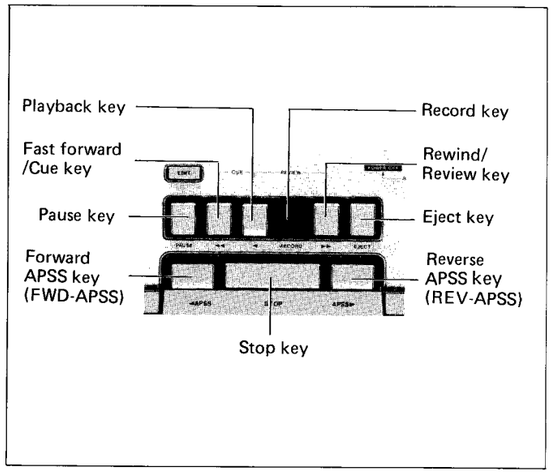

Figure 8 FUNCTION KEY LAYOUT

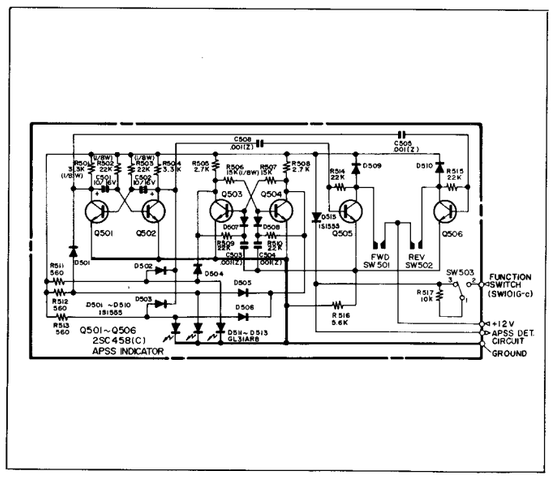

Figure 9 APSS INDICATOR CIRCUIT

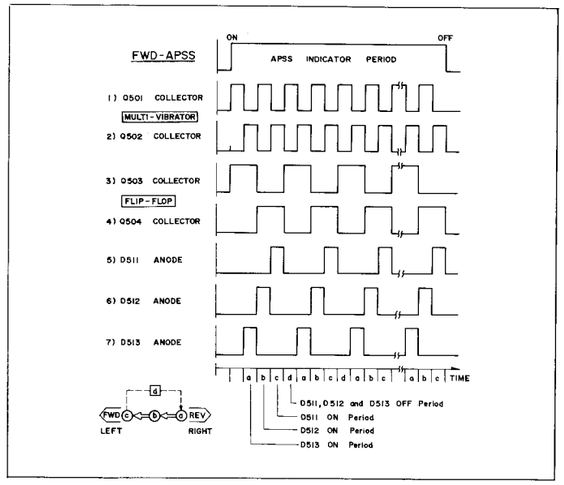

Figure 10 FWD-APSS IND. TIMING CHART

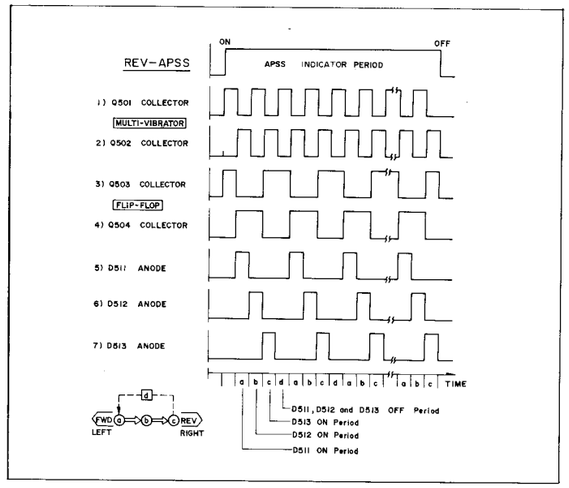

Figure 11 REV-APSS IND. TIMING CHART

② MUTING CIRCUIT (Refer to Figure 12)

The current fed to the muting circuit turns "ON" the muting transistor (Q302 and Q305) and attenuates the signal from head to hold back the monitor noise.

③ APSS DETECTION CIRCUIT

(Refer to Figures 13, 14 and 15)

The current fed to the APSS detection circuit drives the tape playback signal given from the record/playback head into the APSS pre-amp (IC401) through the equalizer amp (Q201 to Q204) and APSS mixer (Q205), turning "ON" the Q401, and now the signal is amplified to exceed VBE (voltage between base and emitter) and charges the C406 up to +12 volts.

Next, when the Q402 is turned "ON", the Q403 is turned "OFF", and the potential of the Q403 collector stabilizes at +12 volts. Therefore the Q404 is not turned "ON", in consequence, neither is the Q405. As a result, the plunger is not actuated. In other words, as far as the tape carries signals the plunger does not work, that is, the tape is continuously fast forwarded according to the mechanism of the APSS. Meanwhile, when there is no signal on the tape, the potential, even if amplified by the equalizer amp (Q201 to Q204) and APSS pre-amp (IC401), becomes lower than VBE of Q401, which, therefore, is turned "OFF", and the electric charge of C406 (determined by the value of R405 and C406) is discharged at the time constant. When the potential of C406 is discharged to be below VBE of Q402, the Q402 is turned "OFF" and the Q403 is activated. Therefore, the collector potential of Q403 becomes zero (0) volt and, consequently, the +12-volt voltage passes through the R412, allowing a discharge current to flow towards the C407. By this discharge current the potential of the Q404 base drops momentarily to zero (0) volt, and the Q404 is turned "ON".

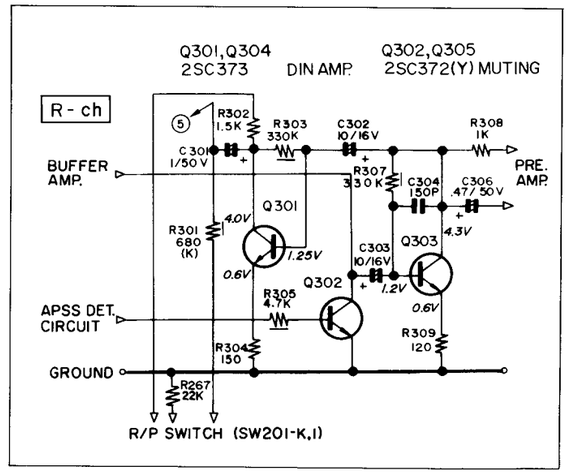

Figure 12 MUTING CIRCUIT

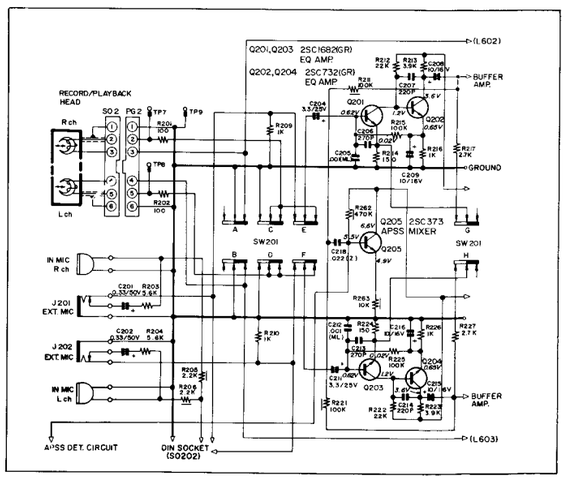

Figure 13 EQ AMP.

Accordingly, the potential of the C407 is permitted to be stabilized from zero (0) volt to +12 volts. When the potential exceeds V_{BE}, the Q404 is turned "OFF". Then the Q404 is turned "ON", and +B is supplied to the base of Q405 through the R414, turning "ON" the Q405. Then, an end of the plunger is grounded and +12V is applied to the plunger, which, in turn, is actuated. When the Q404 is turned "OFF", the Q405 is also turned "OFF", cutting off the potential to the plunger. When the plunger is put in action, the APSS lockplate is stretched out to release the FWD-APSS key. Consequently, the FWD-APSS switch (SW501) is turned "OFF" and the pinch roller is pressed hard against the flywheel shaft. Moreover, the fastforwarding gear is disengaged from the gear of the takeup turntable, setting the unit in normal playback mode again. As the FWD-APSS switch (SW501) is turned "OFF", the light emitting diodes of D513, D512 and D511 stops flickering and the APSS limiter circuit is made inactive. Further, the muting circuit of Q302 and Q305 also stops its function.

In the meantime, when the REV-APSS key is depressed the fast-forwarding gear meshes with the gear of supply turntable and the REV-APSS switch (SW502) is turned "ON" to set the tape in rewind mode, permitting the light emitting diodes of D511, D512 and D513 to flicker. The successive function is just as in the case of FWD-APSS behavior.

This ends the explanation of the APSS performance.

Note However, that the APSS may malfunction when either one of following recordings is played back, but, remember, this is not a trouble.

1. A prolonged portion of pianissimo in music.
2. A blank portion in the midst of music (more than 3 seconds when measured in playback).
   * In cases 1 & 2 the FWD-APSS or REV-APSS key, if depressed, resets itself and regular playback mode is resumed.
3. A too short interval between programs (about 1 second when measured in playback).
4. A noisy hum or buzz recorded in a blank portion.
   * In cases 3 & 4 the condition doesn't allow the APSS circuit to work easily, and the blank portion couldn't be detected.
5. FWD-APSS key depressed within 10 seconds (as measured in playback) from the end of a preceding selection.
6. REV-APSS key depressed within 10 seconds (as measured in playback) from the beginning of a selection.
   * In cases 5 & 6 the tape runs 10 or 30 times as fast as in playback mode if the FWD-APSS or REV-APSS key is depressed, therefore the tape skips a blank portion while the key is being depressed.

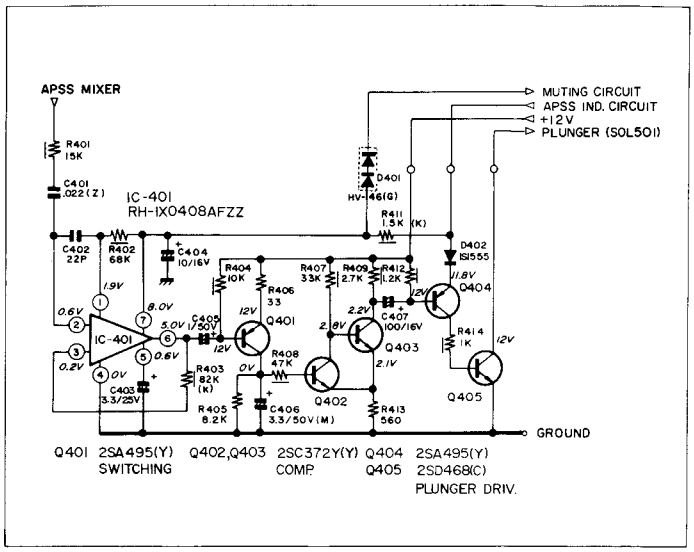

Figure 14 APSS DETECTION CIRCUIT

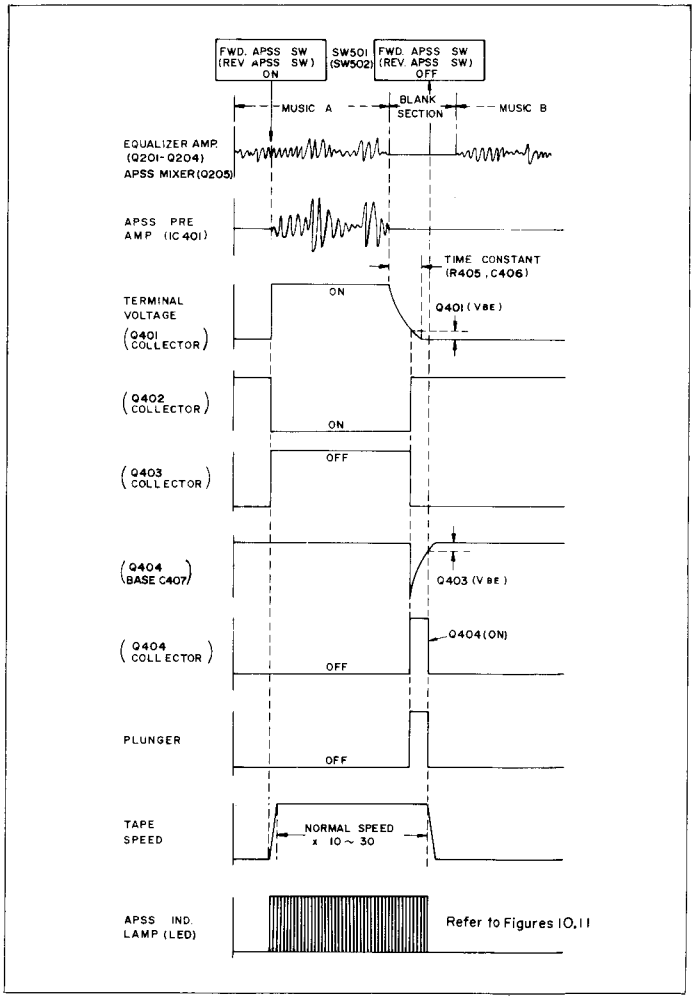

Figure 15 APSS MOVEMENT PRINCIPLE

MECHANICAL ADJUSTMENT

■ PLAY ADJUSTMENT OF FLYWHEEL SHAFT THRUST

(Refer to Figure 16)

1. Slowly rotate the flywheel shaft thrust play adjusting screw clockwise until there will be no thrust play.
2. Next, rotate the thrust play adjusting screw about 1/4 of its full turn counter clokwise. (Since 1 pitch of the adjusting screw refers to 0.8 mm, the thrust play thus created becomes 0.1 mm to 0.3 mm.)

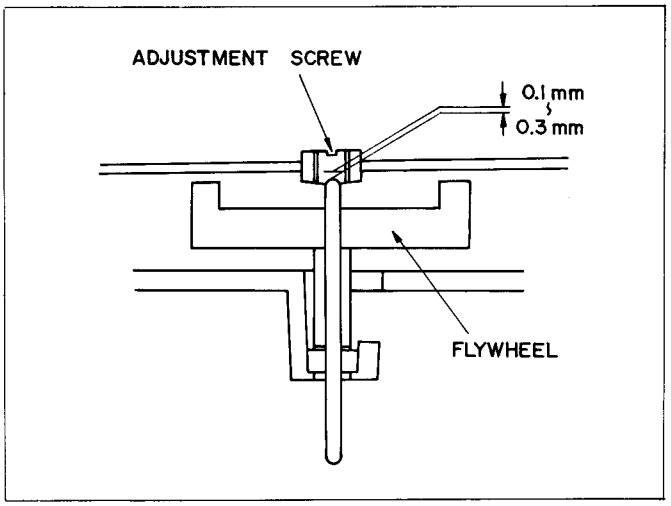

Figure 16

■ PINCH ROLLER PRESSURE ADJUSTMENT

(Refer to Figure 17)

1. Set the unit in PLAY mode.
2. Push the point Ⓐ with use of tension gauge (0 gr. to 500 gr.) to make the pinch roller apart from the flywheel shaft. Then, check that the tension gauge will read 300 gr. to 400 gr. when the pinch roller stops to rotate.
3. As a result of the check in the step 2 above, if the reading is found outside the range of 300 gr. to 400 gr., adjust the pressure spring of pinch roller by bending it or replace.

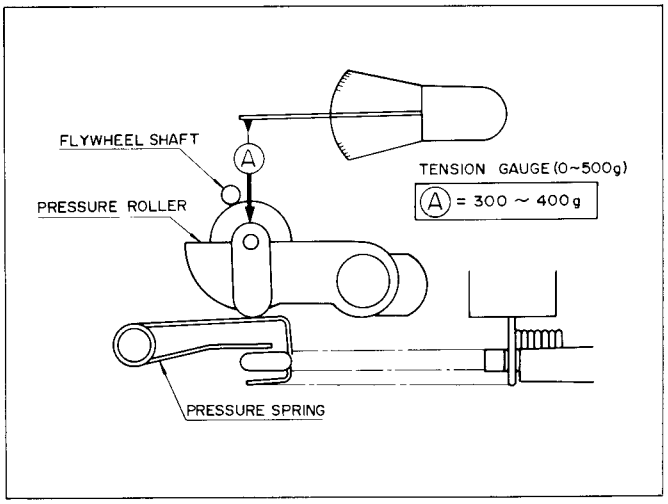

Figure 17

■ OPERATION CHECK OF FWD-APSS AND REV-APSS MECHANISMS

(Refer to Figures 42 and 43, Page 29 and 30)

Under PLAY mode, slowly push the FWD-APSS key or REV-APSS key to make sure that the pinch roller (090) and the take-up idler (028) come off respectively from the flywheel shaft and the take-up turntable support (081), and simultaneously the sub-chassis (011) moves 1 mm to 1.5 mm, and further that thereafter, the roller assembly (089) is pressed against the take-up turntable support (081) or the supply turntable support (082). Moreover, when the FWD-APSS key or REV-APSS key is released by pushing the FF (CUE) key or the REWIND (REVIEW) key, make ascertain that the sub-chassis (011) is reset and the unit gets in PLAY mode.

■ TORQUE MEASUREMENT AT PLAY, FF AND REWIND MODES

(Refer to Figure 18)

1. Mount a torque measuring reel on the reel support (that is, it is placed on the take-up turntable support at PLAY/REWIND mode while on the supply turntable support at REWIND mode).
2. Then gradually release the tension gauge and read it when the rotational speed of the reel support becomes almost constant.
3. Measured torques at each mode should be as tabulated below.

   Note: When the take-up turntable support is stopped at PLAY mode, there should be no slip between the take-up turntable support and take-up slip roller and/or between the drive belt and take-up slip roller.

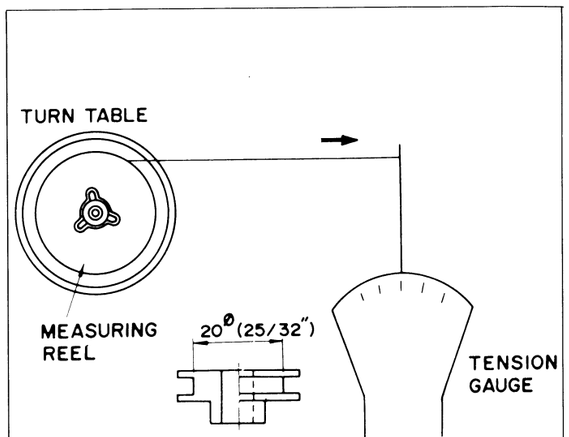

MODE	MEASURED TORQUE
PLAY	35 ~ 60 gr.cm
FF	70 ~ 100 gr.cm
REWIND	70 ~ 100 gr.cm

Figure 18

■ GAP ADJUSTMENT BETWEEN MOTOR SWITCH AND BRAKE LEVER

(Refer to Figure 19)

1. Under each of PLAY, FF, and REWIND modes, make ascertain that the motor switch (SW504) is turned "ON" without fail.
2. When the motor is in a stop, check that the gap Ⓐ between the brake lever and the motor switch (SW504) is 2 mm to 3 mm.
3. If the steps 1 and 2 above are still insufficient for the adjustment, the gap can be adjusted by positionally changing the two soldered terminals Ⓑ of motor switch (SW504) located at the motor PWB with use of a soldering iron.

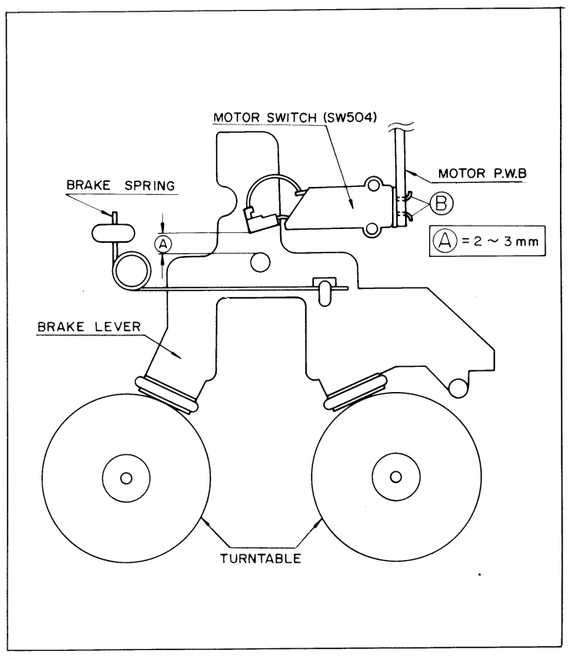

Figure 19

■ OPERATION CHECK OF PAUSE MECHANISM

(Refer to Figure 42, Page 29)

Set the unit in PLAY mode by pushing the key given a mark (◀). Then slowly push the PAUSE key and make ascertain that the take-up idler (028) and the pinch roller (090) come off respectively from the take-up turntable support (081) and the flywheel shaft almost at the same time and check that each of the two gaps thus produced is about 0.5 mm.

■ ADJUSTMENT OF PLUNGER SETTING POSITION

(Refer to Figure 20)

1. Under FF mode, loosen the plunger retaining screw, hold up the part Ⓐ of the plunger by hand and while keeping the plunger in contact with the lock shaft, retighten the plunger retaining screw.
2. After the step 1, make sure of the following.
   - Check that each of the PLAY, FF (CUE), REWIND (REVIEW) keys can be locked smoothly.
   - Check that the FWD-APSS key and REV-APSS key can be locked smoothly and they further be released when the plunger operates.
   - Check that the plunger can start to operate smoothly when the STOP key is pushed to release the APSS keys.
3. After the step 2, the adjustments are not yet sufficient, again carry out the step 1.

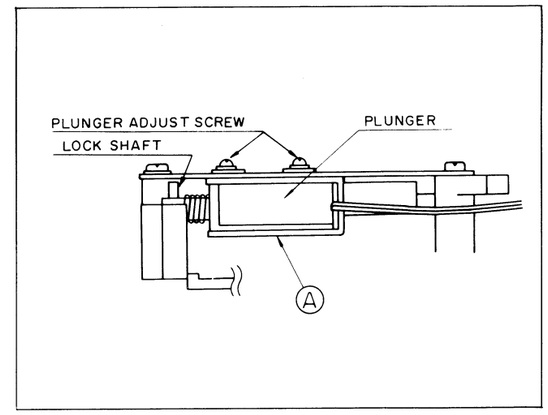

Figure 20

ELECTRICAL MEASUREMENT

* This unit operaters on DC 12 V. Check that the power supply is exactly 12 V before measurement.
* Set the FUNCTION switch (SW101G) to "TAPE" position.
* Refer to Figure 35.

■ RECORD OSCILLATOR BIAS CURRENT AND BIAS FREQUENCY ADJUSTMENT

(Refer to Figure 21)

1. Connect the V.T.V.M. across the 100 ohm resistor (R201, R202).
2. Place the unit in RECORD mode.
3. Adjust the semi-variable resistores (VR601, VR602) so that the V.T.V.M. reads 50 mV for the right channel (R201) and left channel (R202) respectively.
4. Make sure the record oscillator bias frequency is 53 ± 1 kHz.
5. As a result of the check in the step 5 above, if the reading is found outside the 53 ± 1 kHz, adjust the bias oscillation coil (L601)
6. After the step 5, again make sure of the bias current.

SWITCH	POSITION
RIF (SW601)	A
BIAS (SW602)	NORMAL

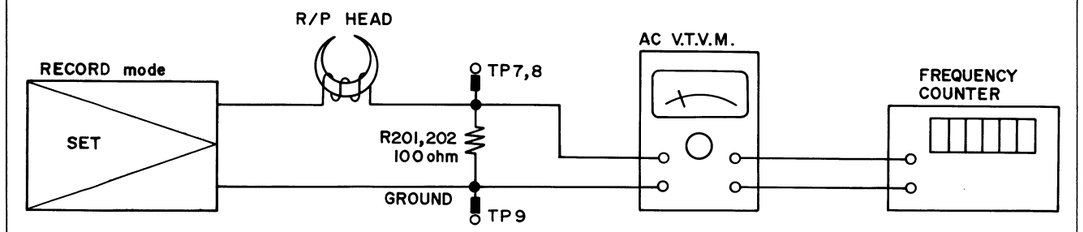

Figure 21

■ ERASE CURRENT CHECK

(Refer to Figure 22)

1. Connect the V.T.V.M. across the 1 ohm resistor (R603).
2. Place the unit in RECORD mode.
3. Make sure the erase current is 90 ± 20 mV.

SWITCH	POSITION
BIAS (SW602)	NORMAL

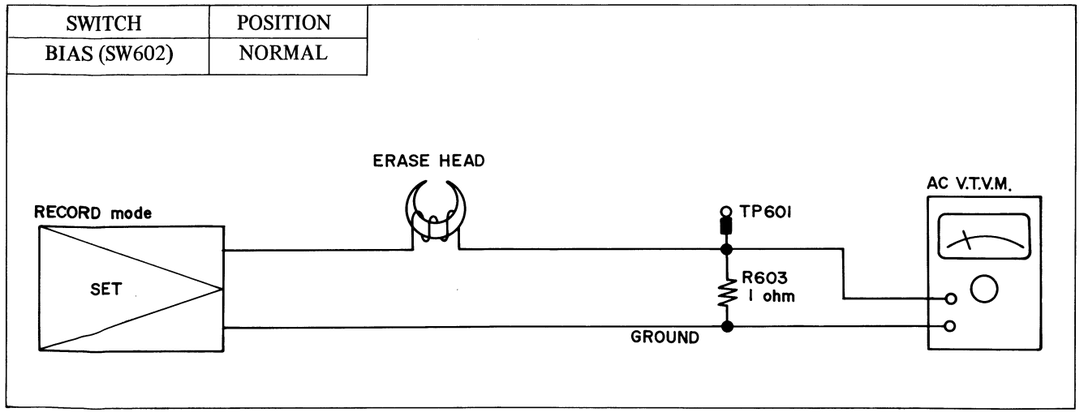

Figure 22

■ RECORD AMPLIFIER SENSITIVITY CHECK

(Refer to Figure 23)

1. Connect the V.T.V.M. across the 100 ohm resistors (R201, R202).
2. Short circuit the primary coil of the oscillation coil (L601) to stop bias oscillator.
3. Connect the signal generator to the EXT. MIC jacks (J201, J202) and apply signals (1000 Hz, −78 dB) to the unit.
4. Place the unit in RECORD mode.
5. If the record amplifier sensitivity is normal, the reading on V.T.V.M. should be approximately 1.75 mV.

SWITCH	POSITION
ALC/MANUAL (SW202)	MANUAL
EQ (SW203)	NORMAL
MODE (SW303)	STEREO
BIAS (SW602)	NORMAL

VR CONTROL	POSITION
RECORD (VR201)	Maximum
RECORD (VR202)	

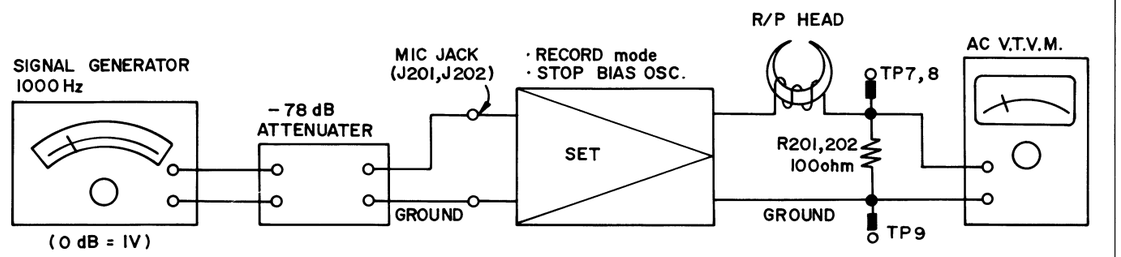

Figure 23

■ PLAYBACK AMPLIFIER SENSITIVITY CHECK

(Refer to Figure 24)

1. Connect load resistor (4 ohm) to the EXT. SP sockets (SO301, SO302) and further connect the V.T.V.M. thereto.
2. Connect the signal generator across the REC/PB head and apply signals (1000 Hz, −80 dB) to the unit.
3. Place the unit in PLAYBACK mode.
4. If the playback amplifier sensitivity is normal, the reading on the V.T.V.M. should be approximately 0.5 V.

SWITCH	POSITION
EQ (SW203)	NORMAL
MODE (SW303)	STEREO

VR CONTROL	POSITION
VOLUME (VR301)	Mechanical Center
TREBLE (VR302)	
BASS (VR303)	

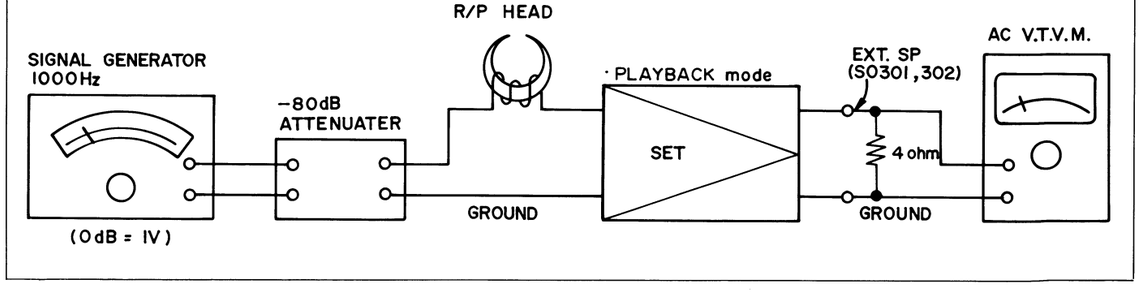

Figure 24

■ SWING ADJUSTMENT OF VU METER

(Refer to Figures 23 and 25)

1. Apply signals (1 kHz, −60 dB) to the EXT. MIC jacks (J201, J202).
2. Adjust the record volume controls (VR201, VR202) so that the V.T.V.M. reads 3.5 mV.
3. Rotate the semi-variable resistors (VR305, VR306) to adjust so that each of the two VU meters (ME1, ME2) indicates around "0" VU and swings to the same extent in right and left of the position "0" VU.

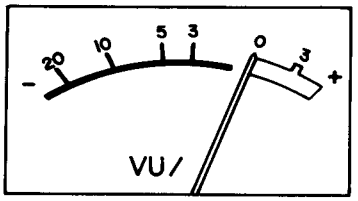

Figure 25

■ RECORD/PLAYBACK HEAD AZIMUTH ADJUSTMENT

(Refer to Figure 26.)

1. Connect load resistor (4 ohm) to the EXT. SP sockets (SO301, SO302) and connect outputs of both the right and left channels to the vertical and horizontal input terminals of oscilloscope.
2. Insert the test tape (MTT-114, 10 kHz, −10 dB Recorded).
3. Place the unit in PLAYBACK mode.
4. Adjust the head azimuth adjusting screw so that Lissajou's waveform attains the maximum and the same phase in right and left.
5. Even without using the oscilloscope, also adjust the head azimuth adjusting screw so that outputs of both the right and left channels attain the maximum and the same phase in right and left, and as a result, the output won't be decreased so much considerably even when the MODE switch (SW303) is set to "MONO".

SWITCH	POSITION
MODE (SW303)	STEREO

VR CONTROL	POSITION
VOLUME (VR301)	Maximum
TREBLE (VR302)	Mechanical Center
BASS (VR303)	

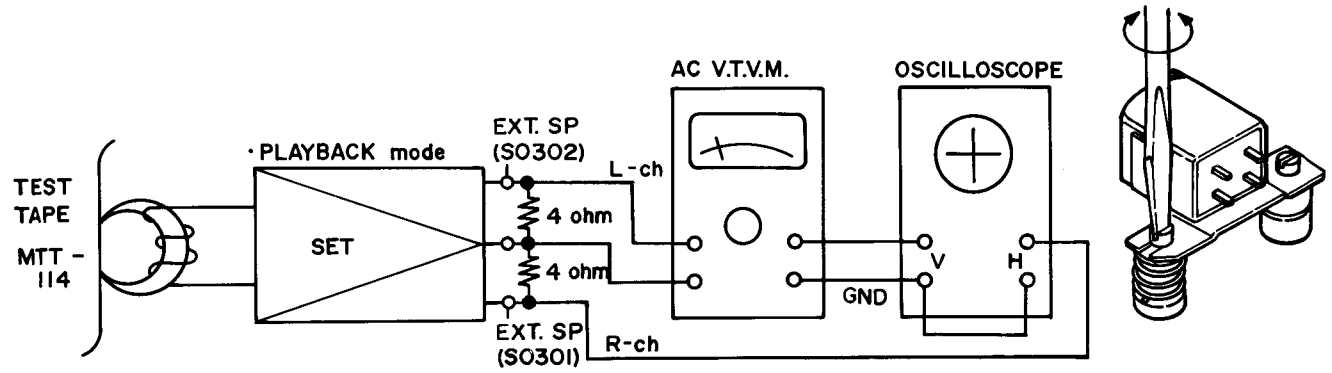

Figure 26

GENERAL ALIGNMENT INSTRUCTION

Should it become necessary at any time to check the alignment of this receiver, proceed as follows;

1. Set the volume control (VR301) to maximum.
2. Attenuate the signals from the generator enough to swing the most sensitive range of the output meter.
3. Use a non-metallic alignment tool.
4. Repeat adjustments to insure good results.
5. Set the FUNCTION switch (SW101G) to "RADIO" position.

THE INSTRUCTION OF FREQUENCY ADJUSTMENT (GF-9090H, HB)

In order to comply with FTZ rule: Nr. 358/1970, please fix the low end of dial frequency (87.5MHz) and the high end of dial frequency (107.9MHz) on FM band, by adjusting oscillation coils (L3 and L4) and oscillation trimmer (TC4), respectively, as illustrated in Fugure 35.

AM ALIGNMENT CHART

(Refer to Figure 35)

STEP	BAND	TEST STAGE	SIGNAL GENERATOR		RECEIVER		ADJUSTMENT
			CONNECTION TO RECEIVER	INPUT SIGNAL REQUENCY	DIAL SETTING	REMARKS	
1	MW	IF	Refer to Figure 27	Exactly 455 kHz. (400 Hz, 30%, AM modulated)	High end of dial. (minimum capacity)	Adjust for maximum output.	Adjust the AM IF transformers (T101) (T102)
2	MW	Band Coverage	Refer to Figure 28	Exactly 510 kHz. (400 Hz, 30%, AM modulated)	Low end of dial. (maximum capacity).	Adjust for maximum output.	Adjust the MW oscillation coil (L9).
3	MW		Same as step 2.	Exactly 1650 kHz. (400 Hz, 30%, AM modulated)	High end of dial. (minimum capacity).	Same as step 2.	Adjust the MW oscillation trimmer (TC107).
4	MW	Tracking	Same as step 2.	Exactly 600 kHz. (400 Hz, 30%, AM modulated)	600 kHz.	Same as step 2.	Adjust the MW antenna coil (L7). (See Note A)
5	MW		Same as step 2.	Exactly 1400 kHz. (400 Hz, 30%, AM modulated)	1400 kHz.	Same as step 2.	Adjust the MW antenna trimmer (TC104). (See Note A)
6	MW	Repeat steps 2, 3, 4, and 5 until no further improvement can be made.					
7	LW	Band Coverage	Same as step 2.	Exactly 145 kHz. (400 Hz, 30%, AM modulated)	Low end of dial. (maximum capacity)	Same as step 2.	Adjust the LW oscillation coil (L10).
8	LW		Same as step 2.	Exactly 295 kHz. (400 Hz, 30%, AM modulated)	High end of dial. (minimum capacity)	Same as step 2.	Adjust the LW oscillation trimmer (TC108).
9	LW	Tracking	Same as step 2.	Exactly 160 kHz. (400 Hz, 30%, AM modulated)	160 kHz.	Same as step 2.	Adjust the LW antenna coil (L7).
10	LW		Same as step 2.	Exactly 260 kHz. (400 Hz, 30%, AM modulated)	260 kHz.	Same as step 2.	Adjust the LW antenna trimmer (TC105).
11	LW	Repeat steps 7, 8, 9 and 10 until no further improvement can be made.					
12	SW	Band Coverage	Refer to Figure 29	Exactly 5.85 MHz (400 Hz, 30%, AM modulated)	Low end of dial. (maximum capacity)	Same as step 2.	Adjust the SW oscillation coil (L8).
13	SW		Same as step 12.	Exactly 18.5 MHz. (400 Hz, 30%, AM modulated)	High end of dial. (minimum capacity)	Same as step 2.	Adjust the SW oscillation trimmer (TC106).

14	SW	Tracking	Same as step 12.	Exactly 6.5 MHz. (400 Hz, 30%, AM modulated)	6.5 MHz	Same as step 2.	Adjust the SW antenna coil (L6).
15	SW		Same as step 12.	Exactly 16 MHz (400 Hz, 30%, AM modulated)	16 MHz	Same as step 2.	Adjust the SW antenna trimmer (TC103).
16	SW	Repeat steps 12, 13, 14 and 15 until no further improvement can be made.					

Note A Check the alignment of the receiver antenna coil by bringing a piece of ferrite (such as a coil slug) near the antenna loop stick, then a piece of brass. If ferrite increases output, loop requires more inductance. If brass increases output, loop requires less inductance. Change loop inductance by sliding the bobbin toward the center of ferrite core to increase inductance, or away to decrease inductance.

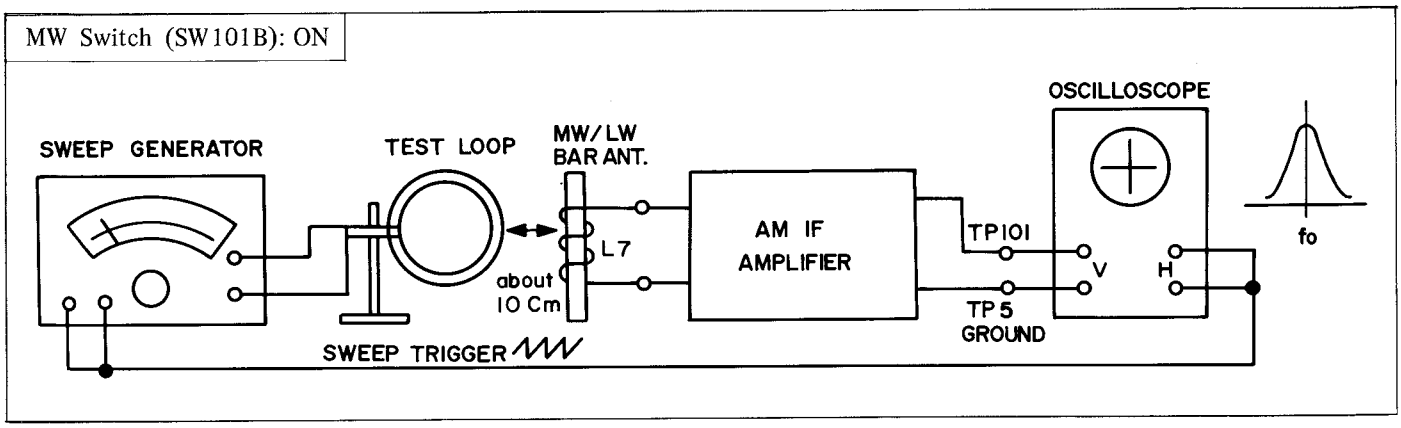

Figure 27 AM IF ALIGNMENT EQUIPMENT CONNECTION

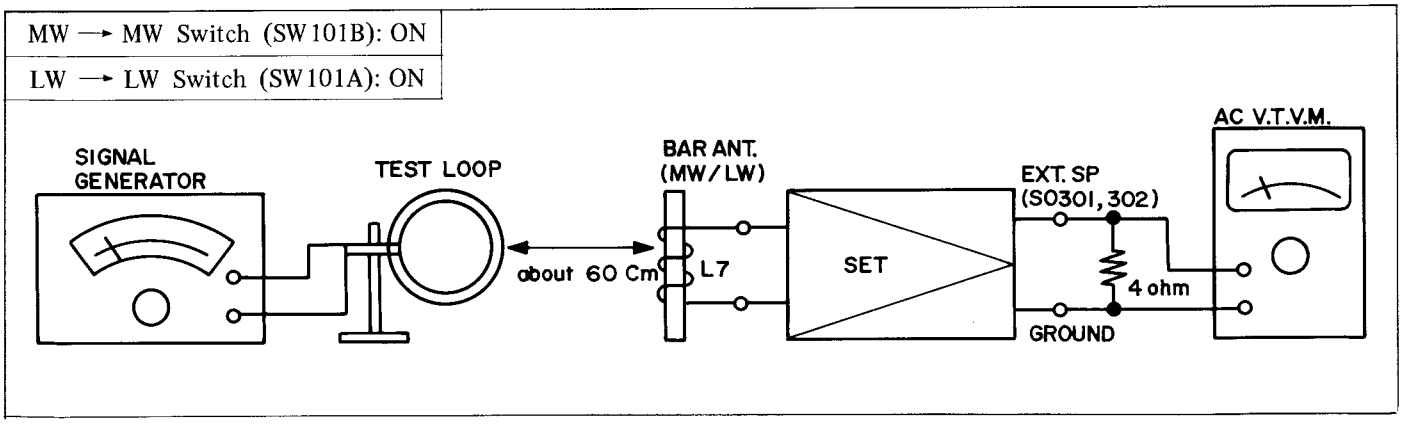

Figure 28 MW/LW RF ALIGNMENT EQUIPMENT CONNECTION

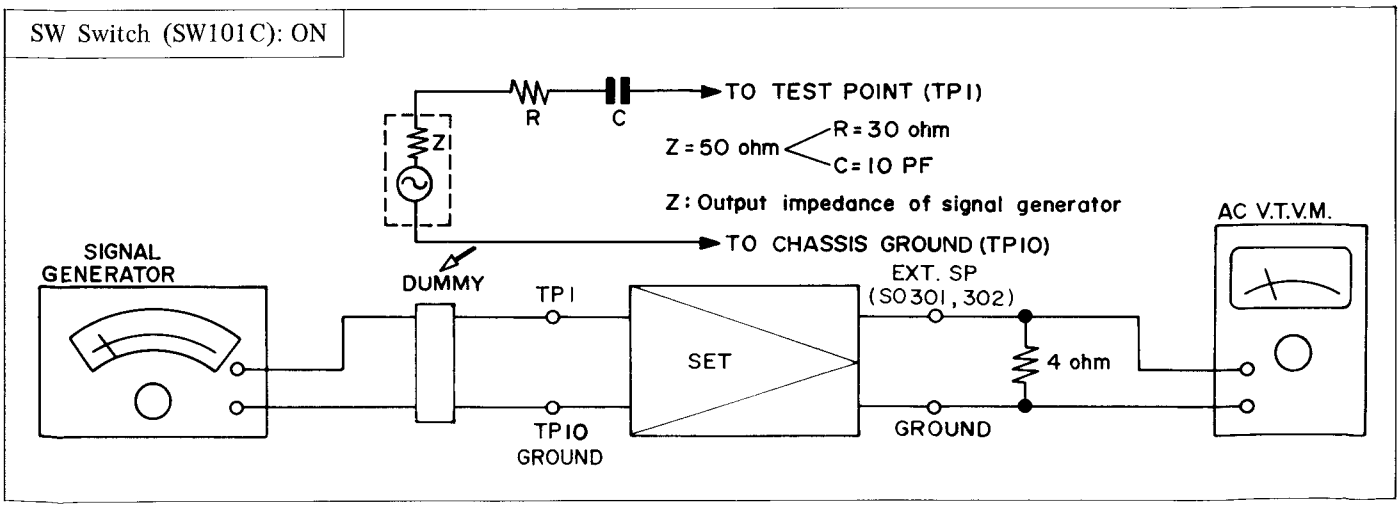

Figure 29 SW RF ALIGNMENT EQUIPMENT CONNECTION

FM ALIGNMENT CHART

(Refer to Figure 35)

STEP	TEST STAGE	SIGNAL GENERATOR		RECEIVER		ADJUSTMENT
		CONNECTION TO RECEIVER	INPUT SIGNAL REQUENCY	DIAL SETTING	REMARKS	
1	IF	Refer to Figure 30	Exactly 10.7 MHz. (400 Hz, 30%, FM modulated)	High end of dial. (minimum capacity)	Adjust for maximum output.	Adjust the FM IF transformers 1. (T1) 2. (T2)
2	Band Coverage	Refer to Figures 31 and 34	Exactly 87.1 MHz (400 Hz, 30%, FM modulated)	Low end of dial. (maximum capacity)	Adjust for maximum output.	Adjust the FM oscillation coils (L3, L4).
3		Same as step 2.	Exactly 108.5 MHz. (400 Hz, 30%, FM modulated)	High end of dial. (minimum capacity)	Same as step 2.	Adjust the FM oscillation trimmer (TC4).
4	Tracking	Same as step 2.	Exactly 88 MHz. (400 Hz, 30%, FM modulated)	88 MHz	Same as step 2.	Adjust the FM RF coils (L1, L2).
5		Same as step 2.	Exactly 108 MHz. (400 Hz, 30%, FM modulated)	108 MHz	Same as step 2.	Adjust the FM RF trimmer (TC3).
6	Repeat steps 2, 3, 4 and 5 until no further improvement can be made.					

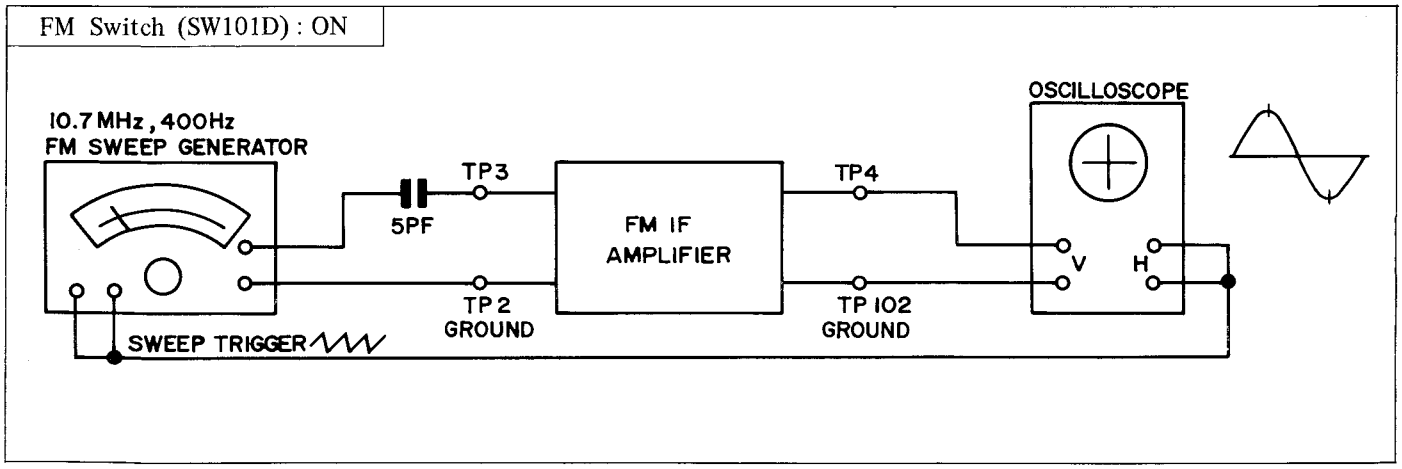

Figure 30 FM IF ALIGNMENT EQUIPMENT CONNECTION

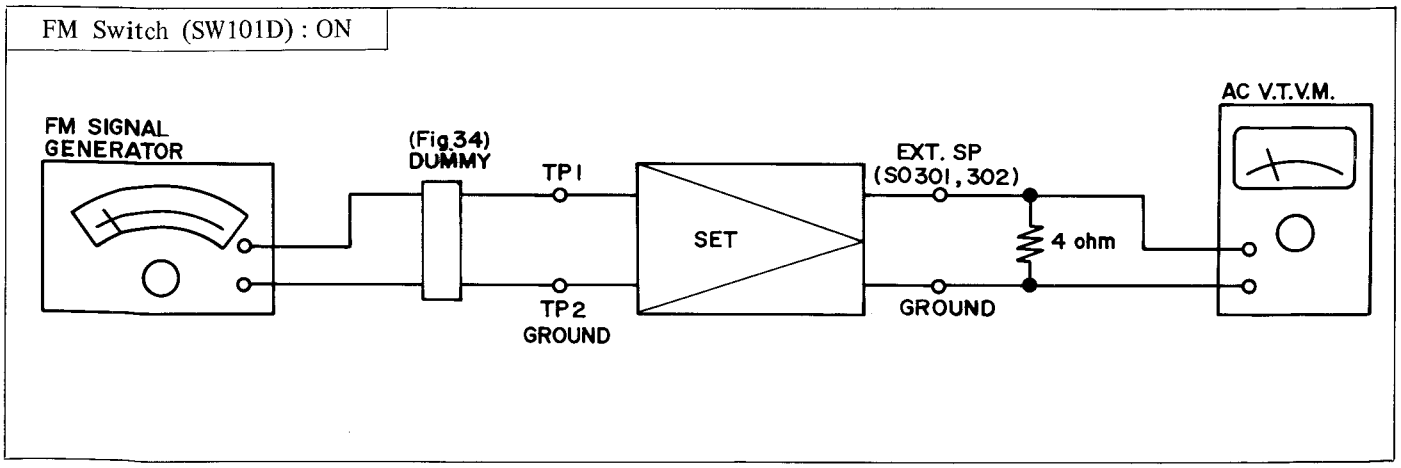

Figure 31 FM RF ALIGNMENT EQUIPMENT CONNECTION

Note B (Refer to Figure 32)

There are 5 kinds of ceramic filters (CF101, CF102) available with this unit and they are given color indication as tabulated below to differentiate the central frequency from one to another among them. When using them, be sure to make the two of the same type a pair.
When other ceramic filters than the one (red) having the central frequency of 10.7 MHz are used, note that a marker (10.7 MHz) of FM sweep generator, if used, will be deviated -- therefore, adjust the generator by putting off the marker.

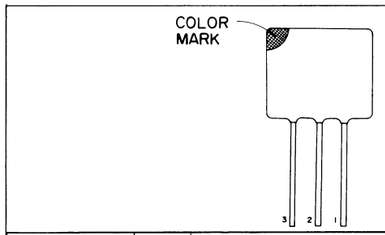

Central frequency (fo)	D	Black:	10.64 MHz ± 30 kHz
	B	Blue:	10.67 MHz ± 30 kHz
	A	Red:	10.70 MHz ± 30 kHz
	C	Orange:	10.73 MHz ± 30 kHz
	E	White:	10.76 MHz ± 30 kHz

Figure 32

FM MPX ALIGNMENT CHART

* P.L.L. (Phase Locked Loop) : Refer to service manual of model RG-5300, E (Page 7 ~ 10).

STEP	SIGNAL GENERATOR		RECEIVER		ADJUSTMENT
	CONNECTION TO RECEIVER	INPUT SIGNAL FREQUENCY	DIAL SETTING	REMARKS	
1	Refer to Figures 33 and 34	Exactly 98 MHz (54 dB) un modulated.	98 MHz	Adjust for 19 ± 0.1 kHz.	Adjust the semi-variable resister (VR1)

FM Switch (SW101D) : ON
MODE (SW303) : STEREO

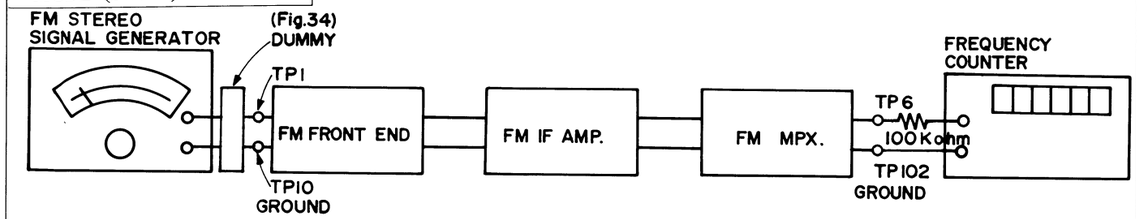

Figure 33 FM MPX ALIGNMENT EQUIPMENT CONNECTION

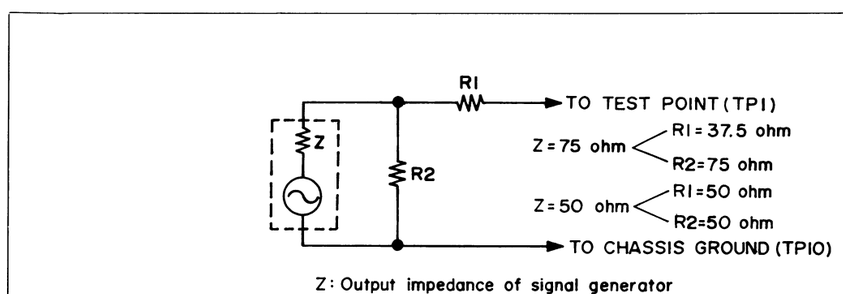

Figure 34 FM DUMMY

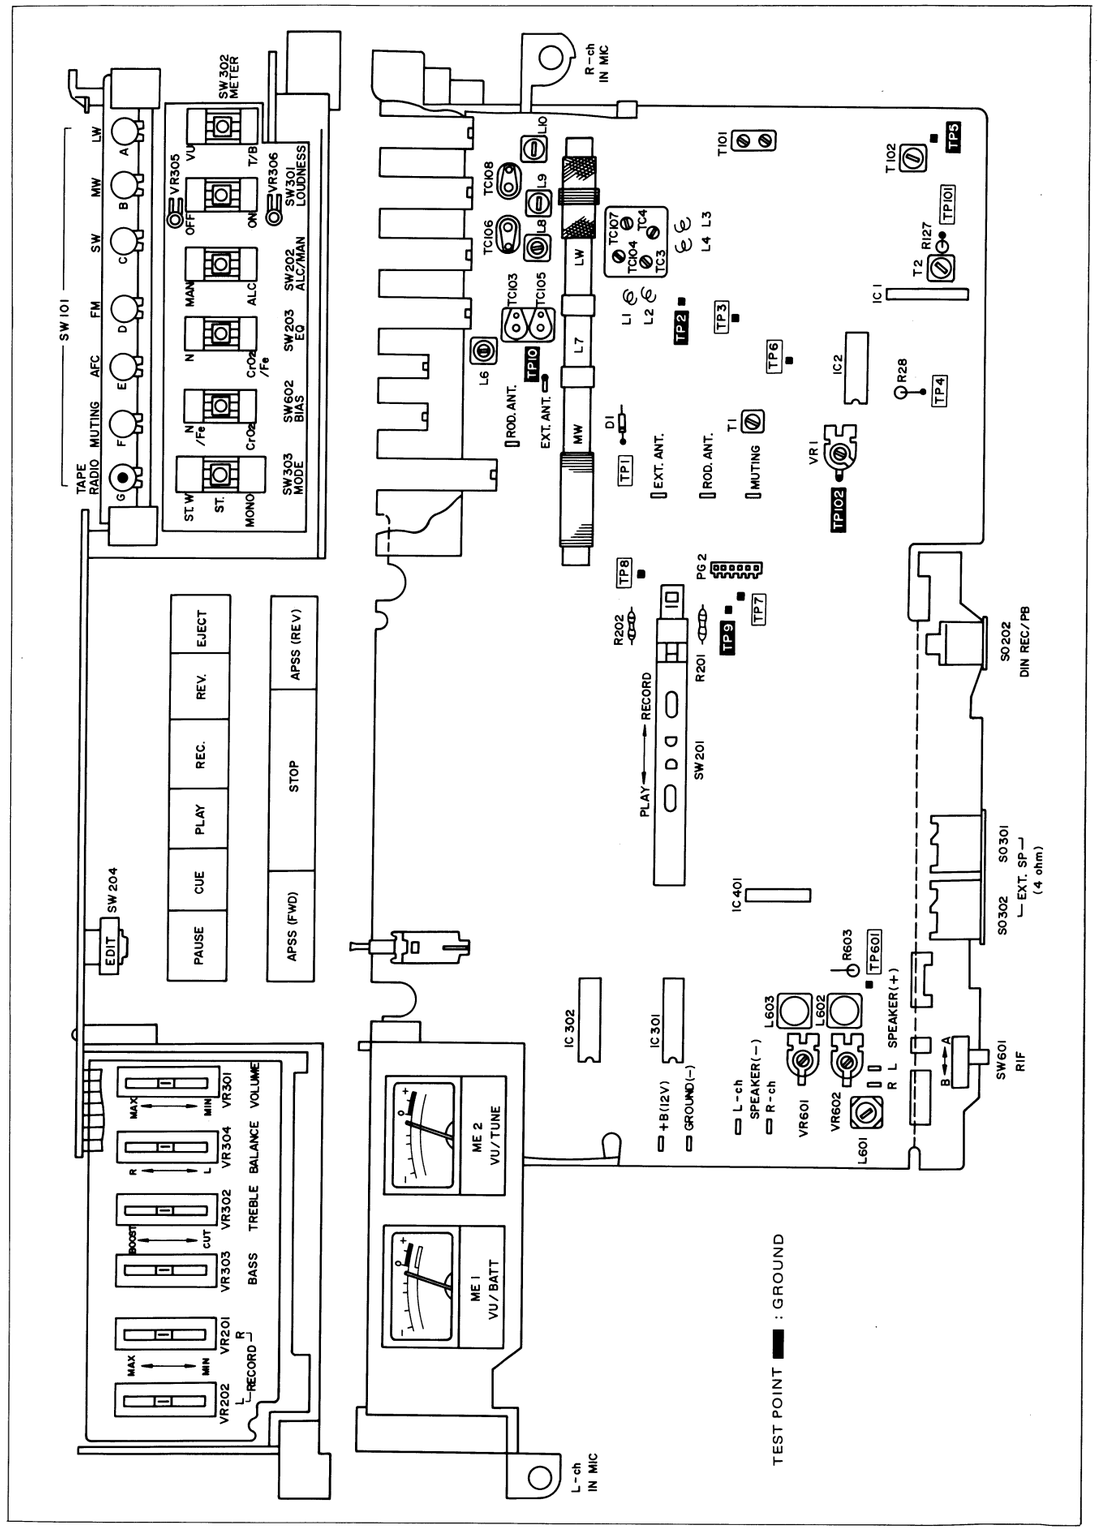

Figure 35 ALIGNMENT POINTS

NOTES
1) FREQ. RANG LW 150 ~ 285 kHz, MW 520 ~ 1620 kHz
SW 5.95 ~ 18 MHz, FM 87.6 ~ 108 MHz
2) I F LW/MW/SW 455 kHz, FM 10.7 MHz
3) CAPACITANCE VALUES ARE IN MFD, P = MMFD.
(ML) = MYLAR TYPE, (S) = STYRQL TYPE
4) RESISTANCE VALUES ARE IN OHM, K = 1000
5) VOLTAGE READINGS TO COMMON GROUND (–) ARE MEASURED WITH V.T.V.M. UNDER NO SIGNAL CONDITION IN TAPE (P.B.) MODE.
FM MODE (IC 1, IC 2, Q 1 ~ Q 4)
AM MODE (Q 101 ~ Q 104)
APSS MODE (IC 401, Q 401 ~ Q 405)
TAPE (REC) MODE (Q 208 ~ Q 211, Q 601, Q 602)

SW. NO.	DESCRIPTION	POSITION
SW101A	LW BAND SELECTOR SWITCH	
B	MW 〃	:FM
C	SW 〃	
D	FM 〃	
E	AFC SWITCH	:ON
F	MUTING SWITCH	:OFF
G	TAPE/RADIO SELECTOR SWITCH	:TAPE
SW201	REC/PB SWITCH	:PLAYBACK
SW202	ALC/MANUAL SWITCH	:ALC
SW203	EQ SELECTOR	:CrO2
SW204	EDITOR	:OFF
SW301	LOUDNESS SWITCH	:ON
SW302	METER SELECTOR	:VU
SW303	MODE SELECTOR	:STEREO
SW304	DIAL LIGHT SWITCH	:ON
SW501	APSS (FWD) SWITCH	:OFF
SW502	APSS (REV) SWITCH	:OFF
SW503	CUE/REVIEW MUTING SWITCH	:OFF
SW504	MOTOR MAIN SWITCH	:OFF
SW601	RIF SWITCH A ⟷ B	:A
SW602	BIAS SELECTOR	:CrO2
SW701	VOLTAGE SELECTOR (H, HB)	:220V
	MAINS POWER (E)	:OFF

(Specifications or wiring diagrams of this model are subject to change for the improvement without prior notice.) **Figure 36 SCHEMATIC DIAGRAM**

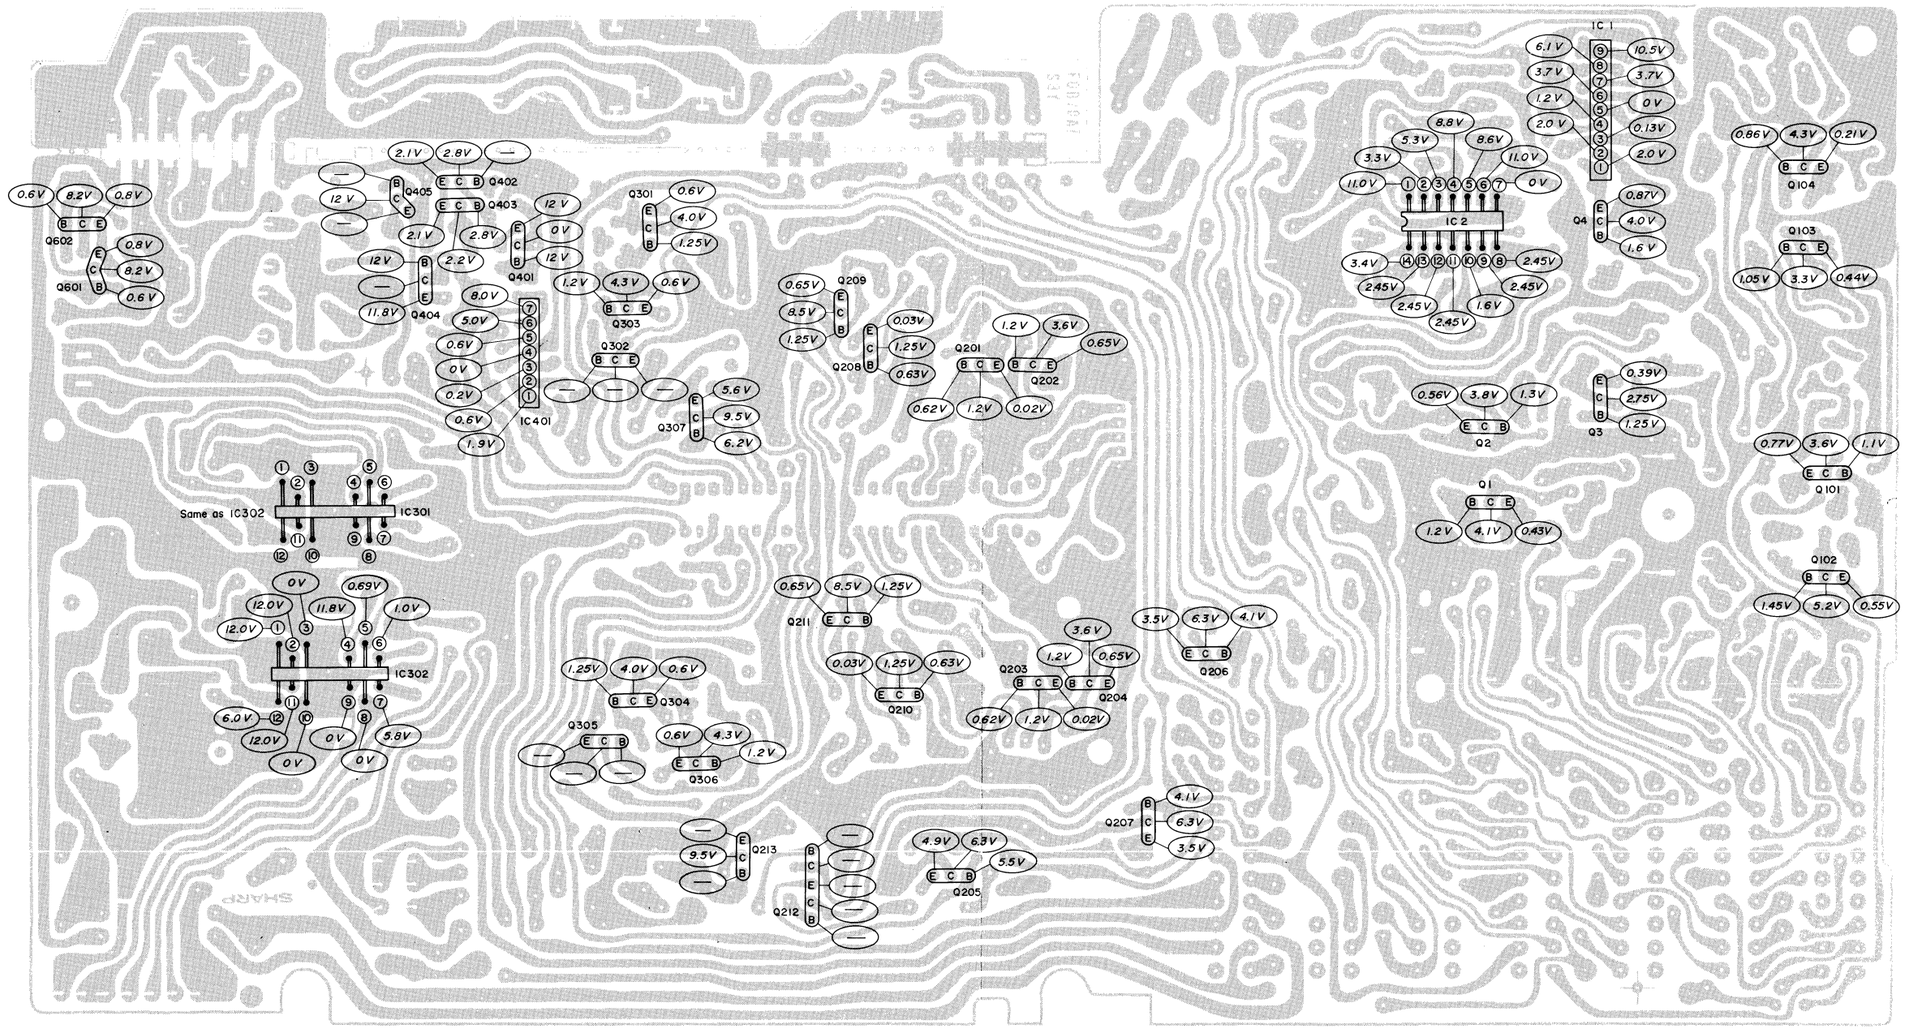

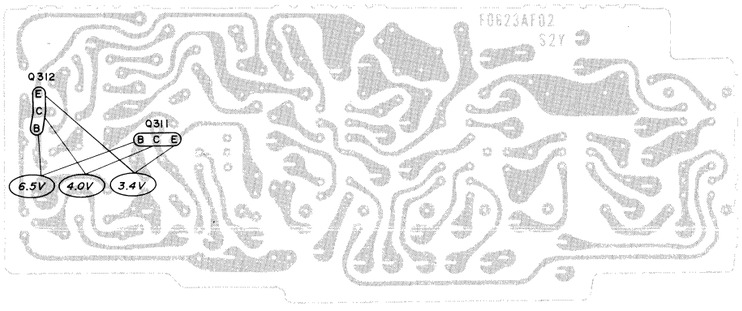

∘VOLTAGE READINGS TO COMMON GROUND(—) ARE MEASURED WITH V.T.V.M. UNDER NO SIGNAL CONDITION.

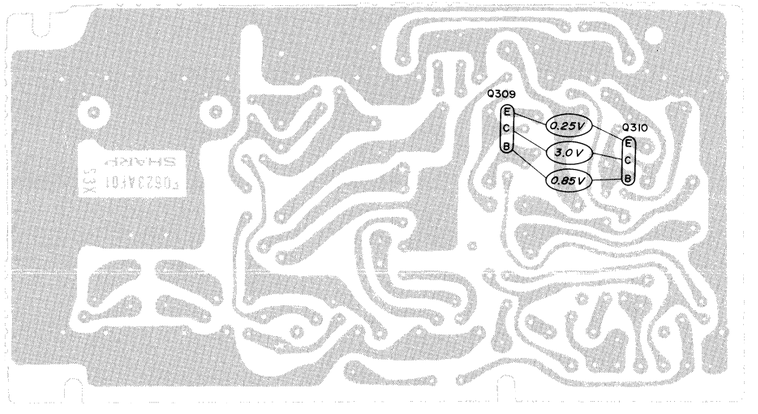

Figure 37 VOLTAGE OF IC AND TRANSISTORS

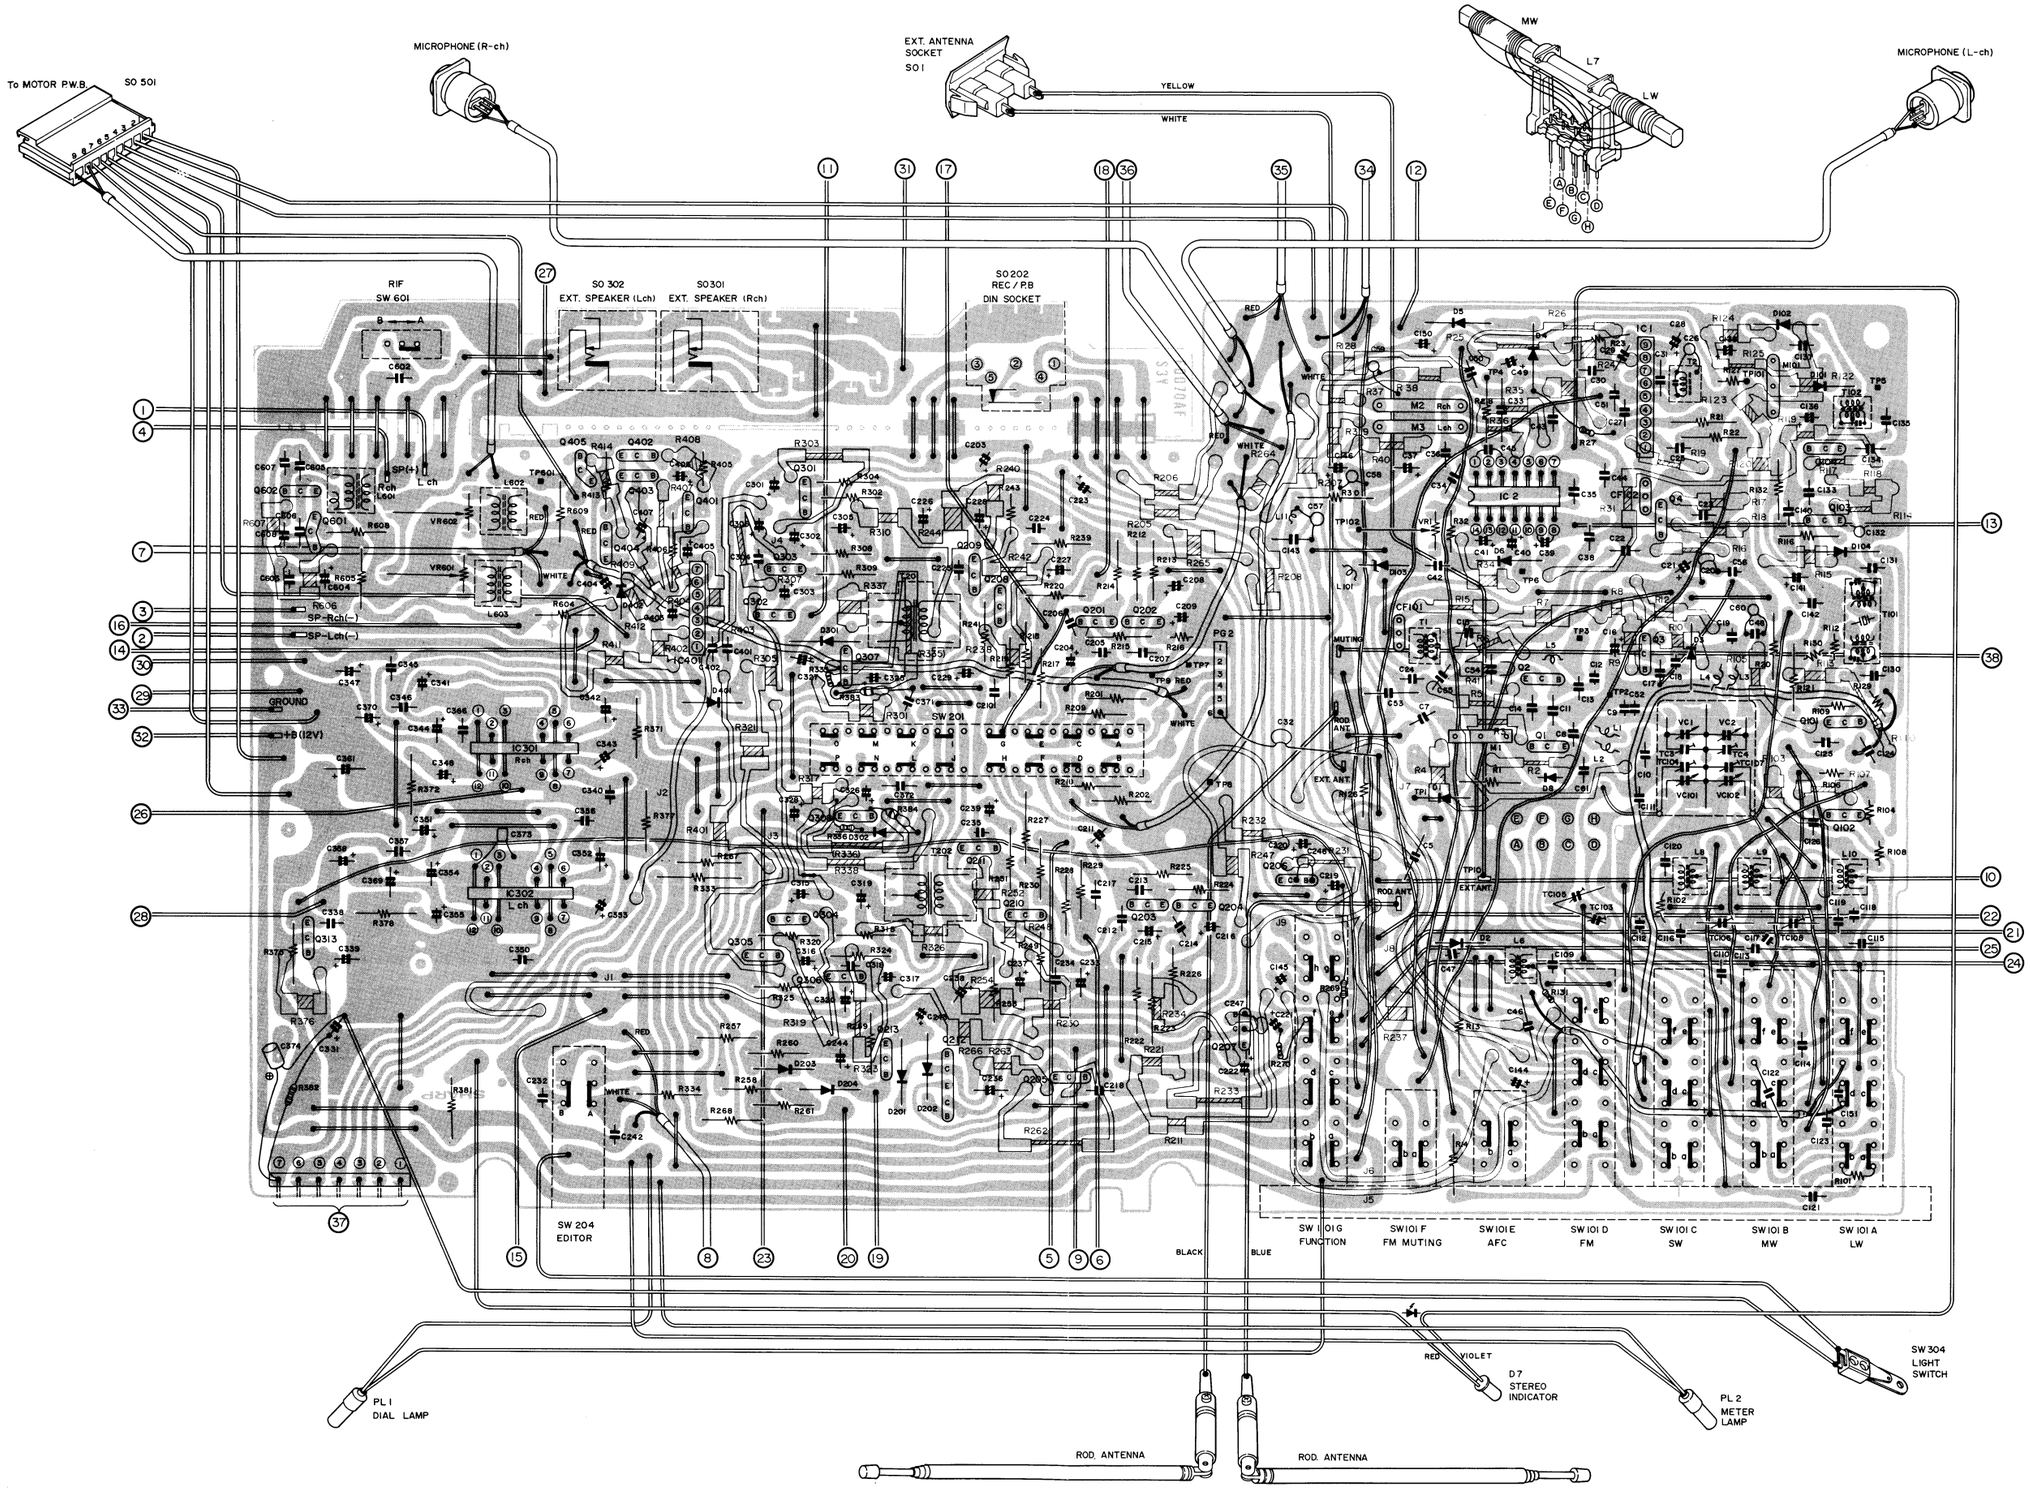

Figure 38 WIRING SIDE OF P. W. BOARD (MAIN)

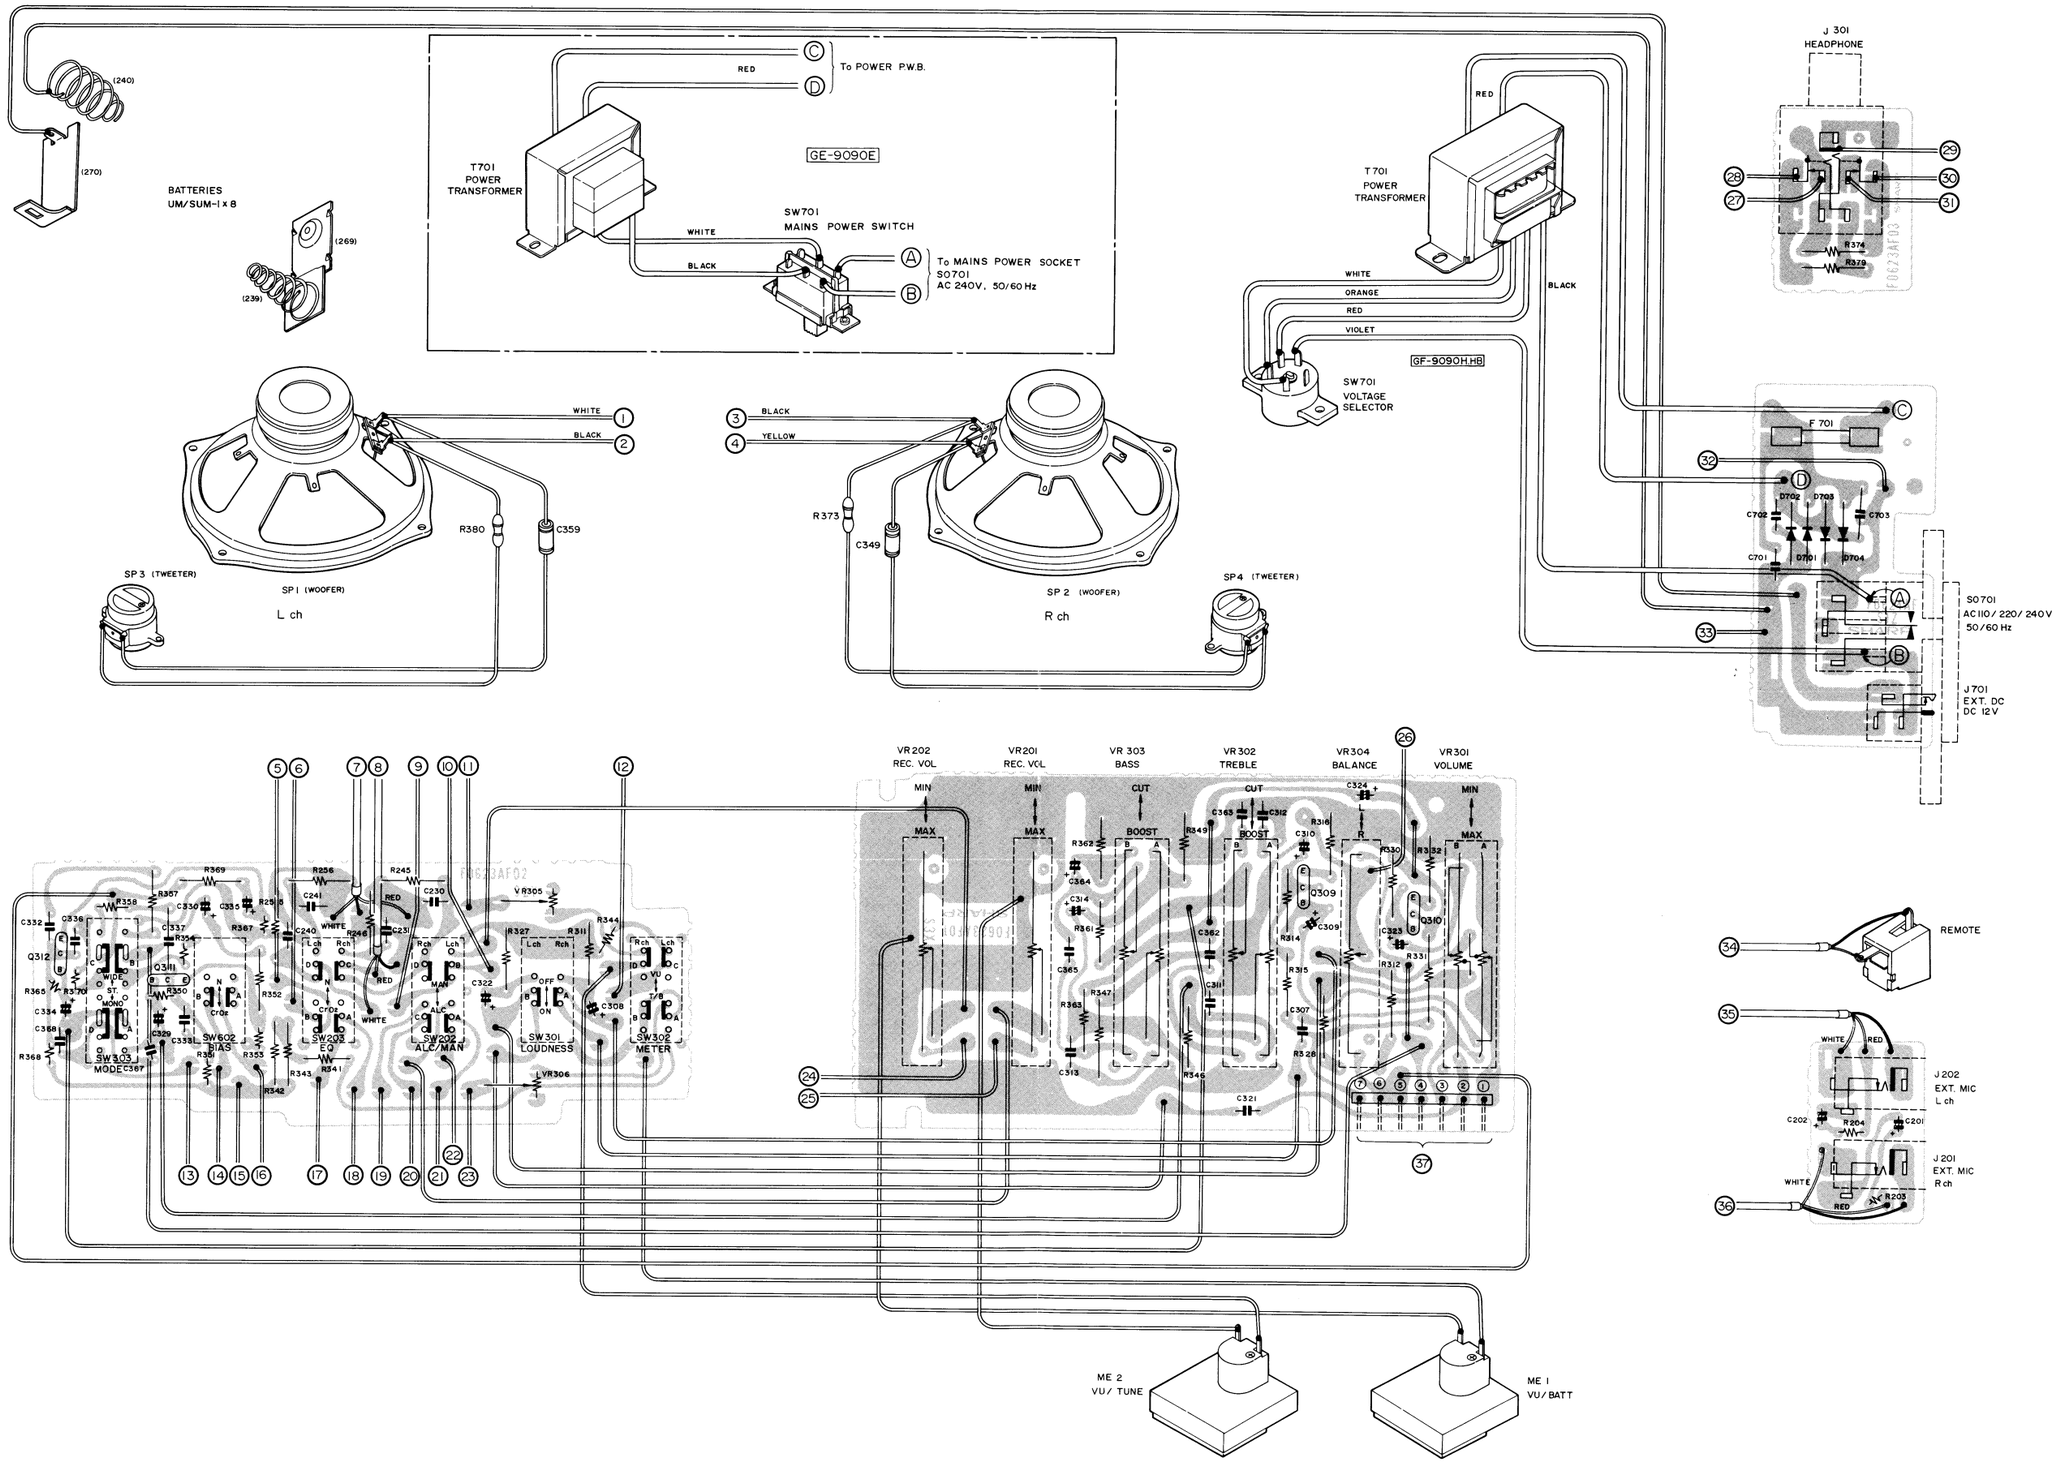

Figure 39 WIRING SIDE OF P. W. BOARD (VOLUME, SWITCH, HEADPHONE, POWER, JACK)

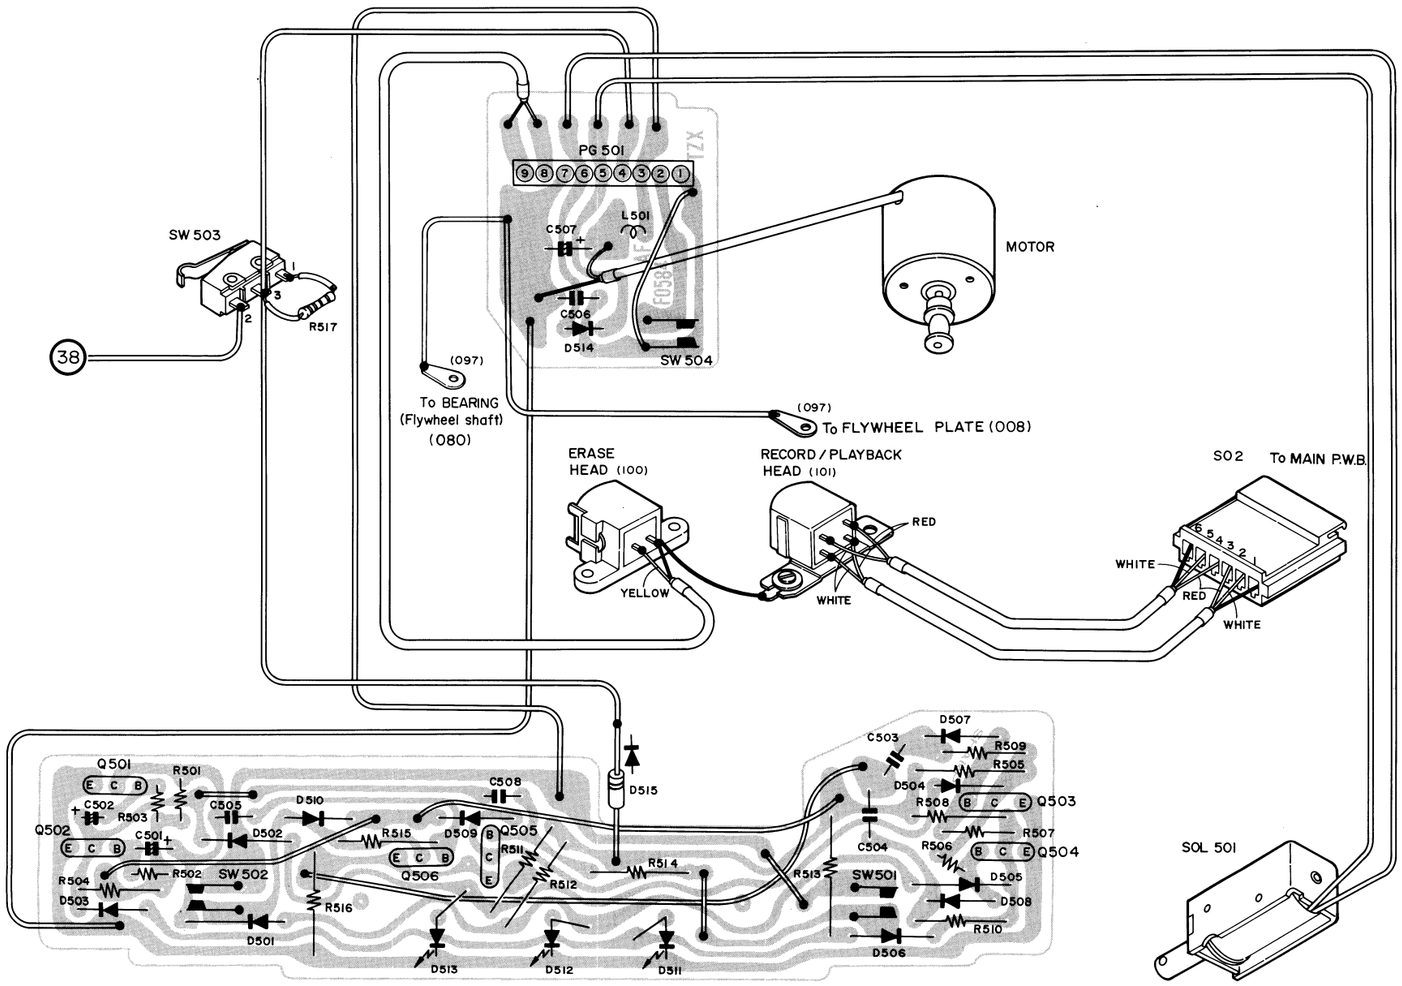

Figure 40 WIRING SIDE OF P. W. BOARD (APSS, MOTOR)

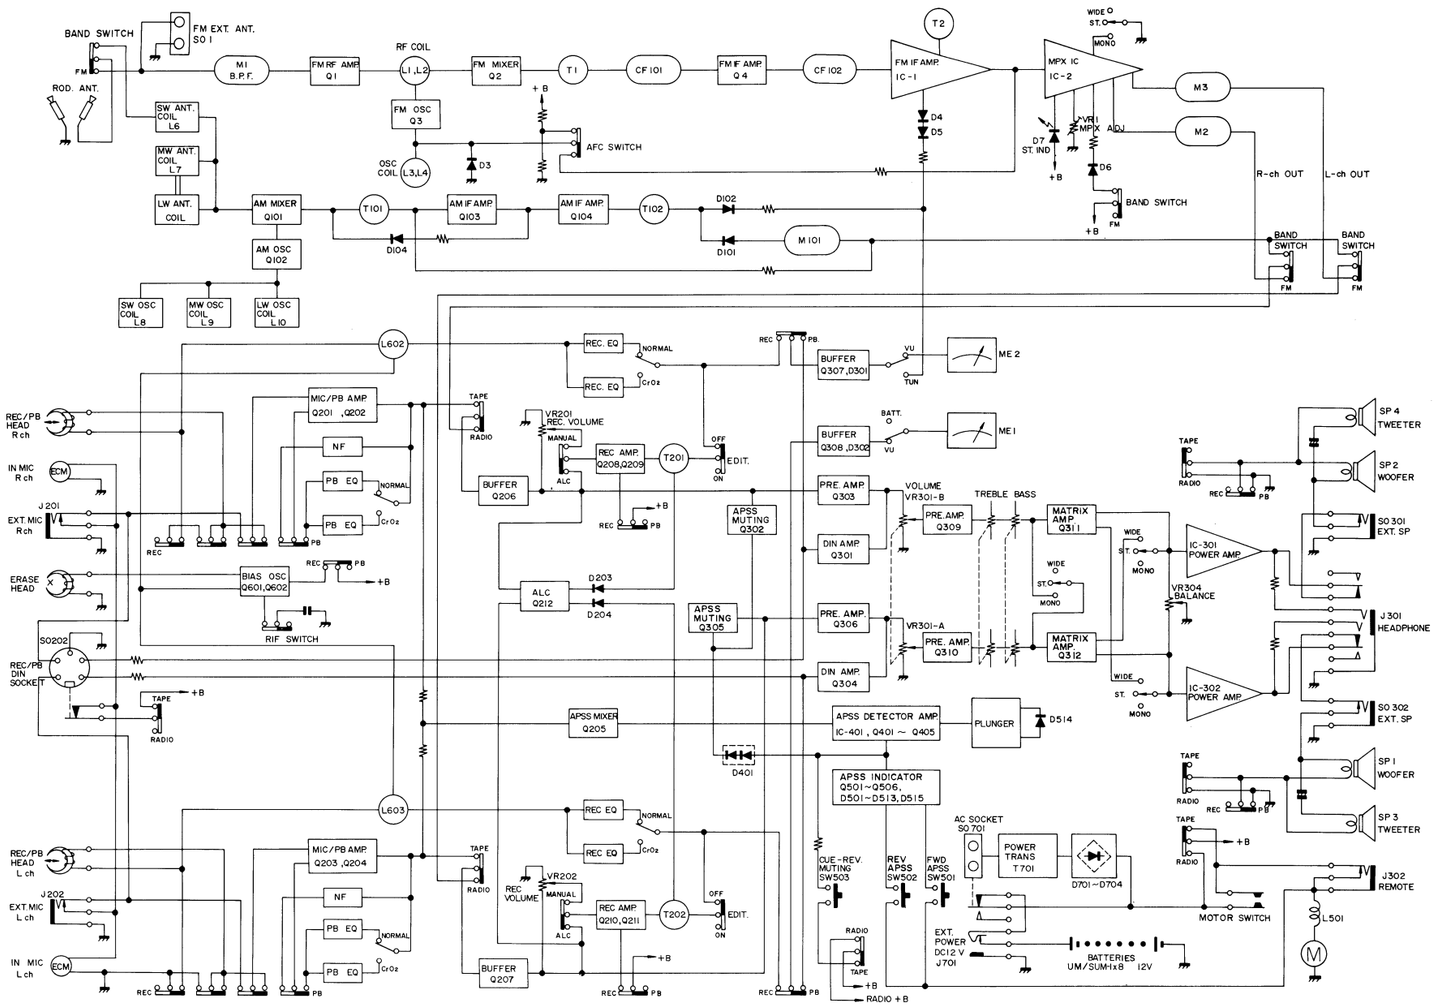

Figure 41 BLOCK DIAGRAM

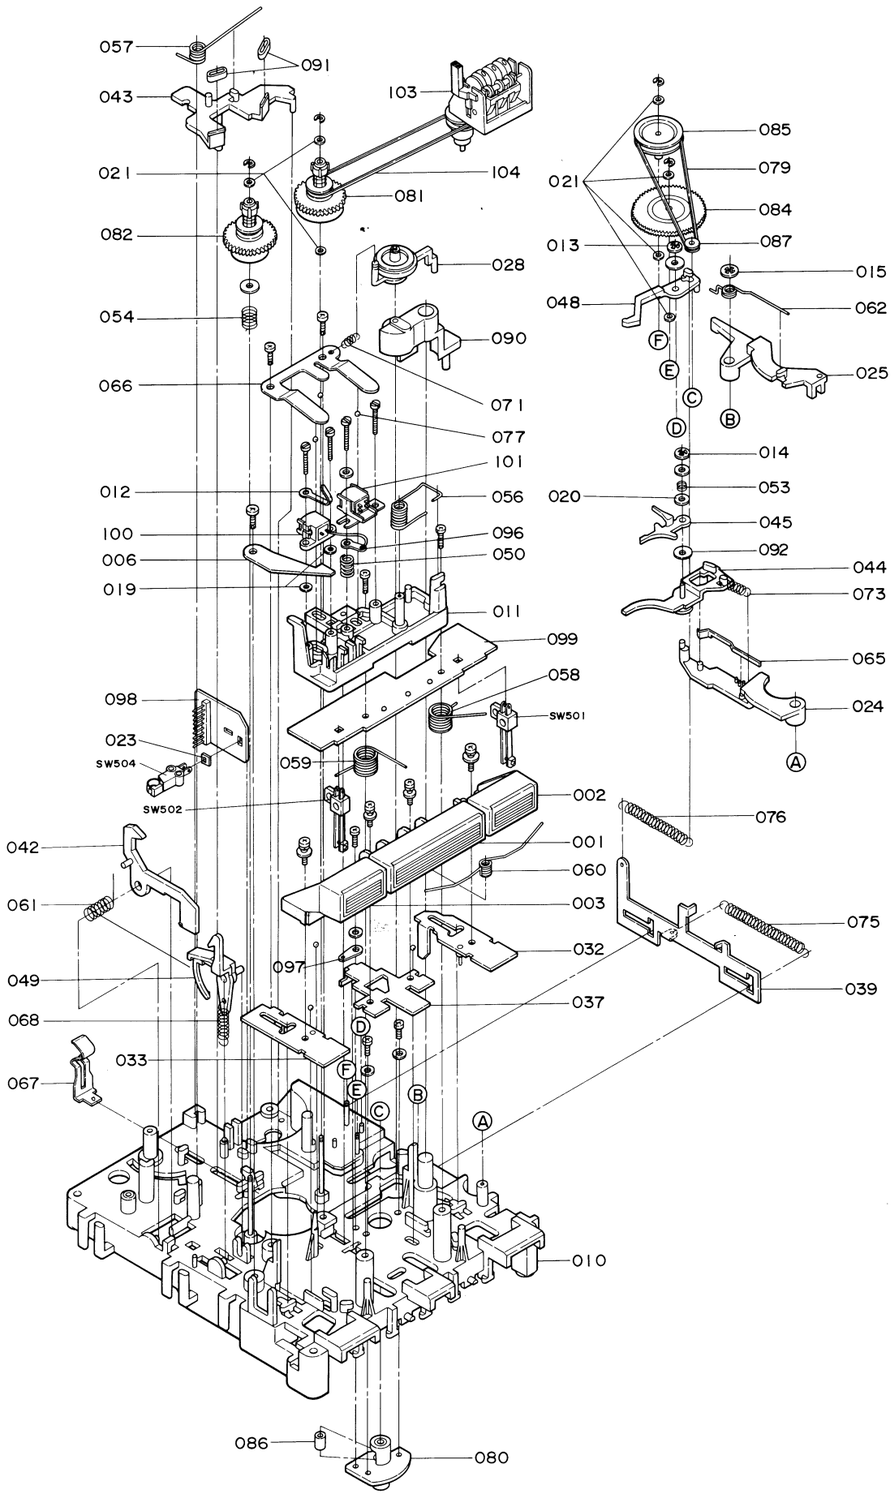

Figure 42 MECHANISM EXPLODED TOP VIEW

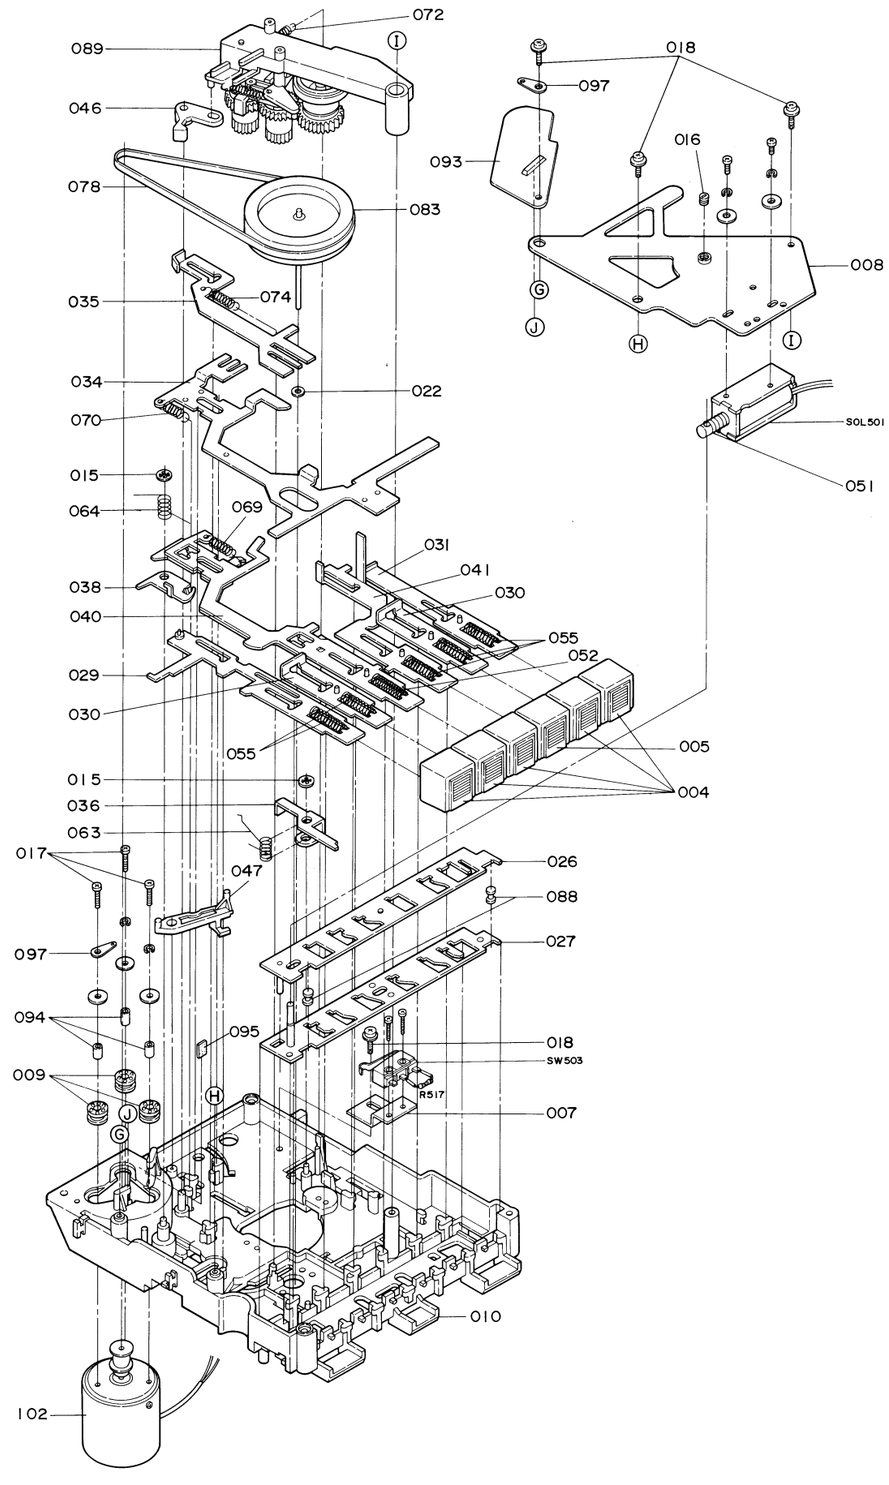

Figure 43 MECHANISM EXPLODED BOTTOM VIEW

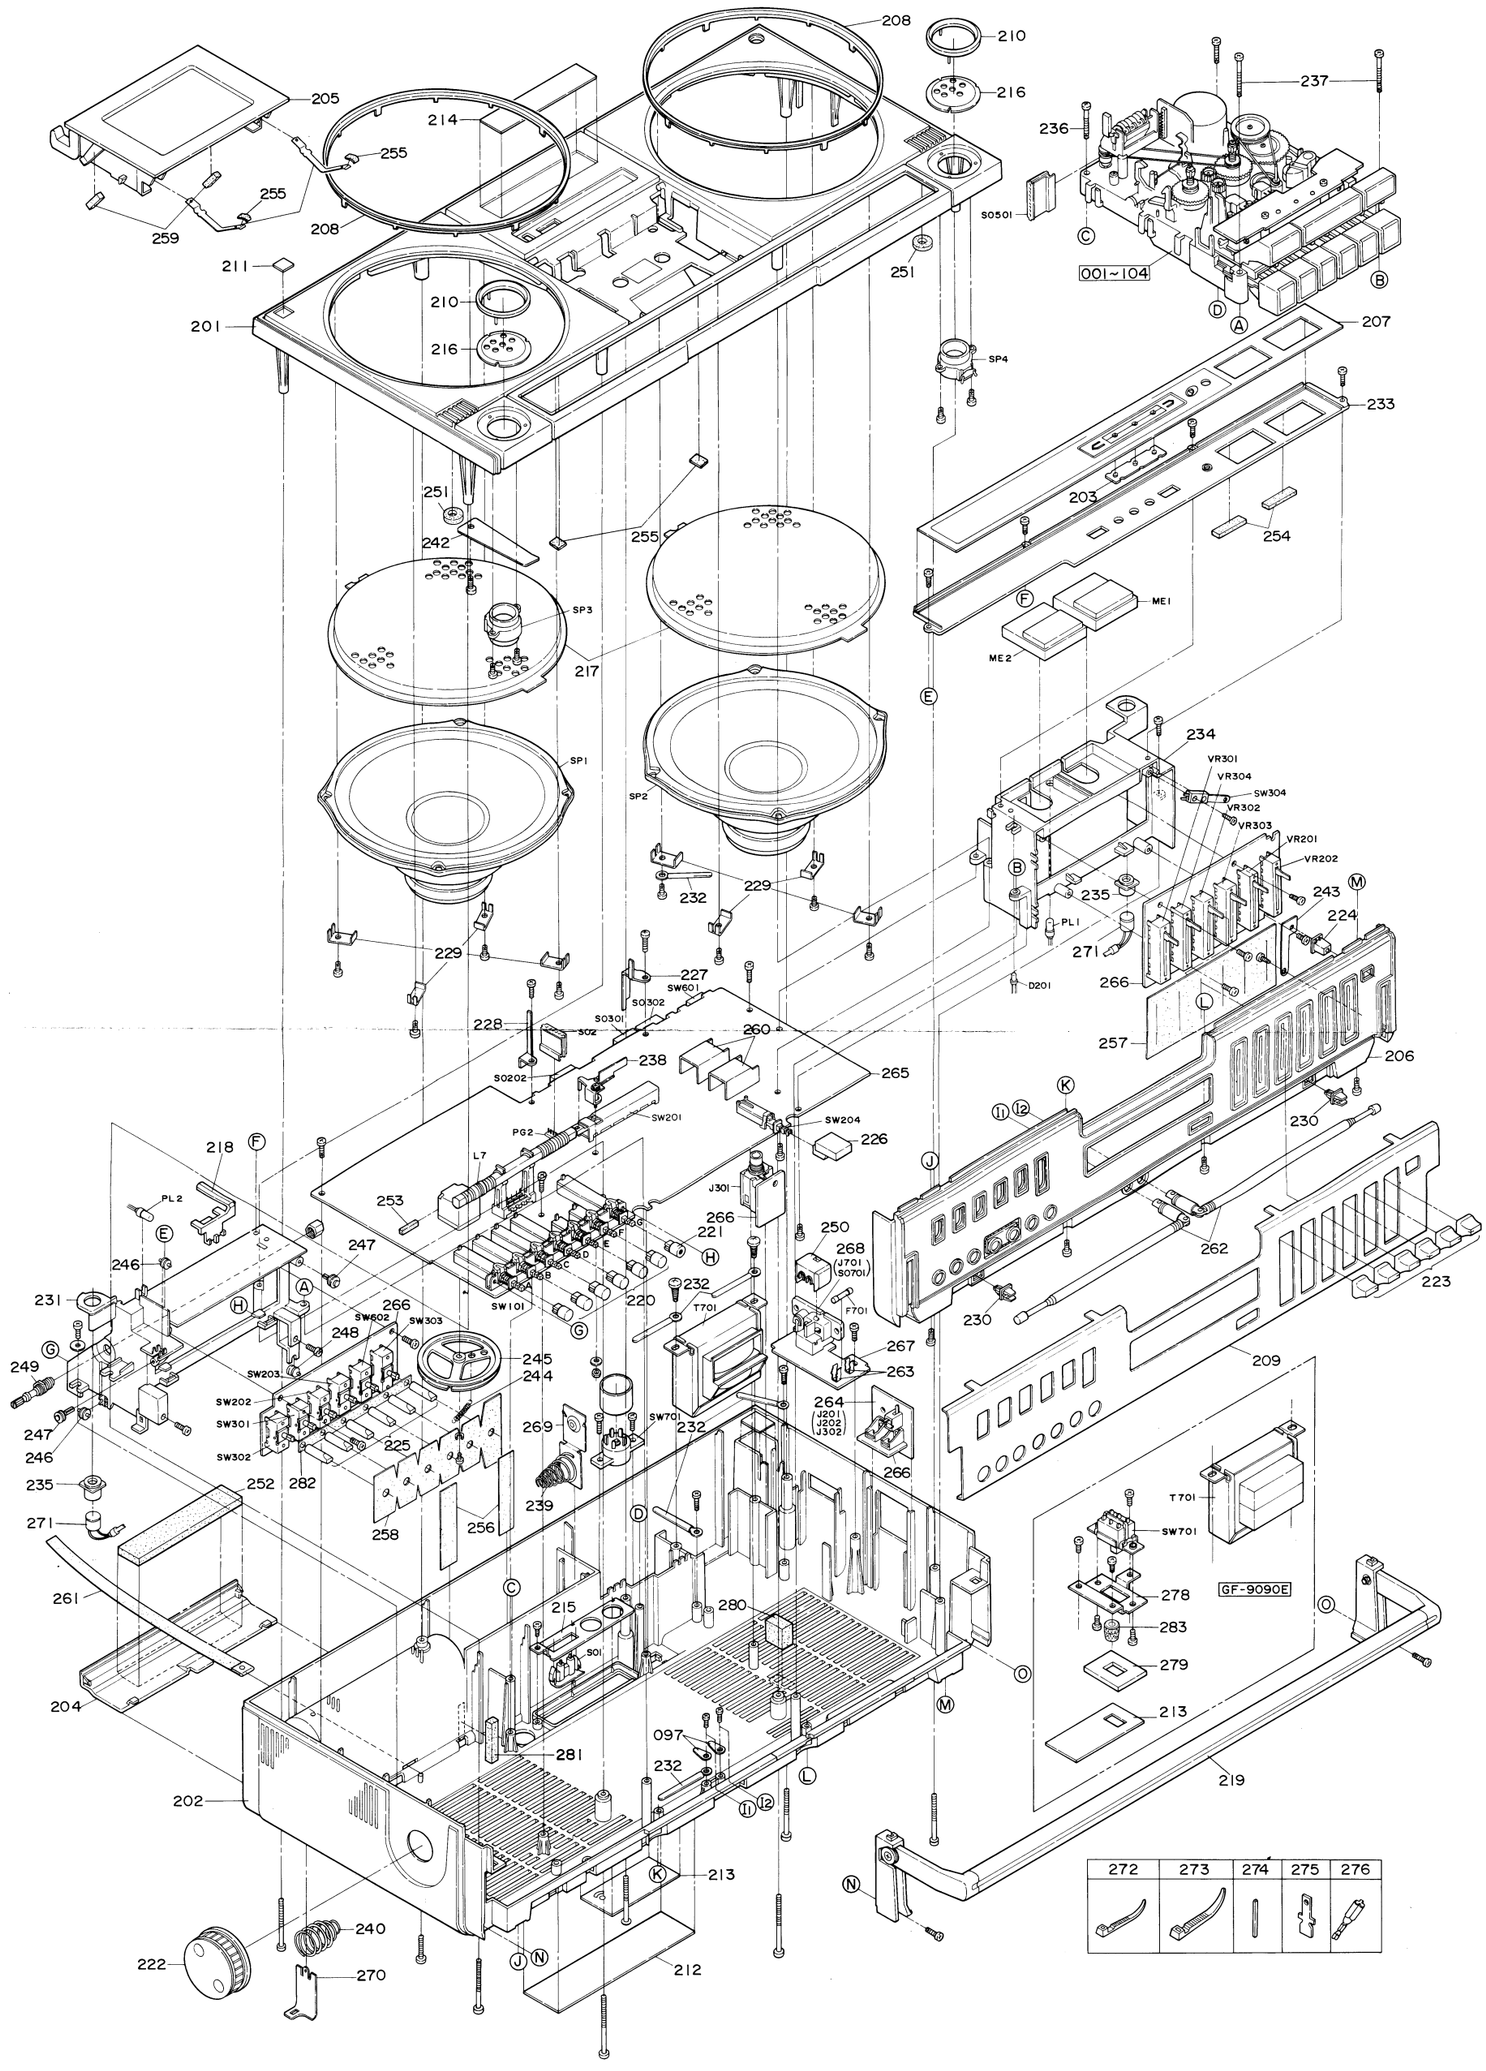

Figure 44 CABINET EXPLODED VIEW

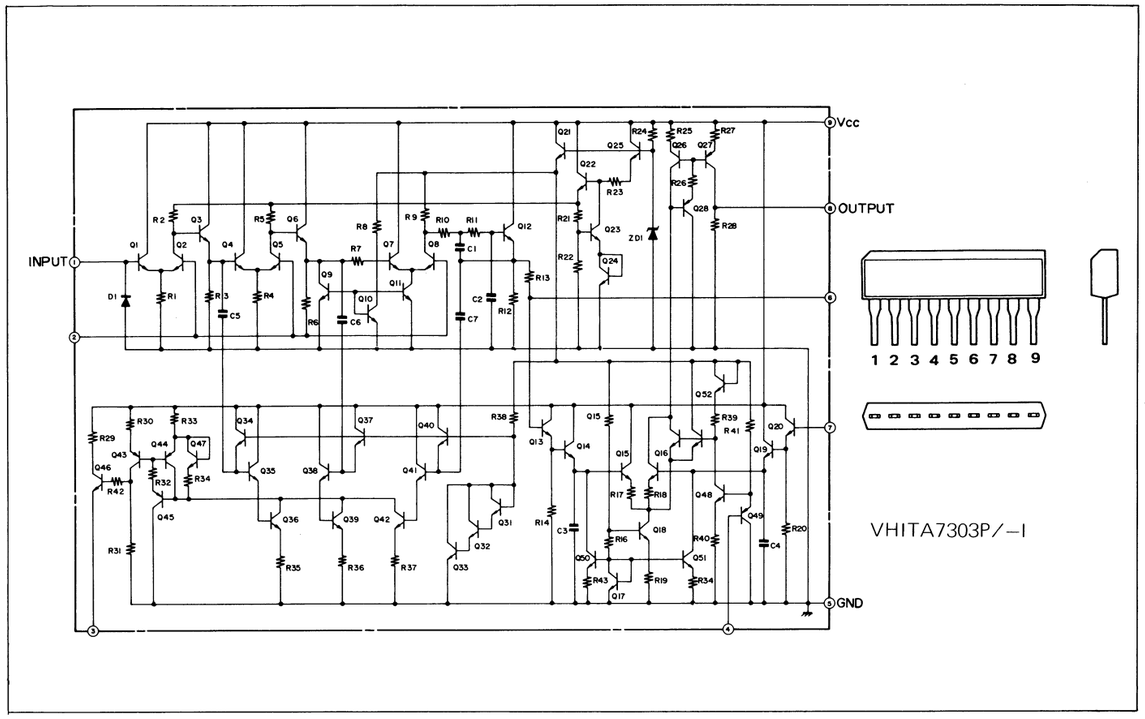

Figure 45 EQUIVALENT CIRCUIT OF IC (IC 1)

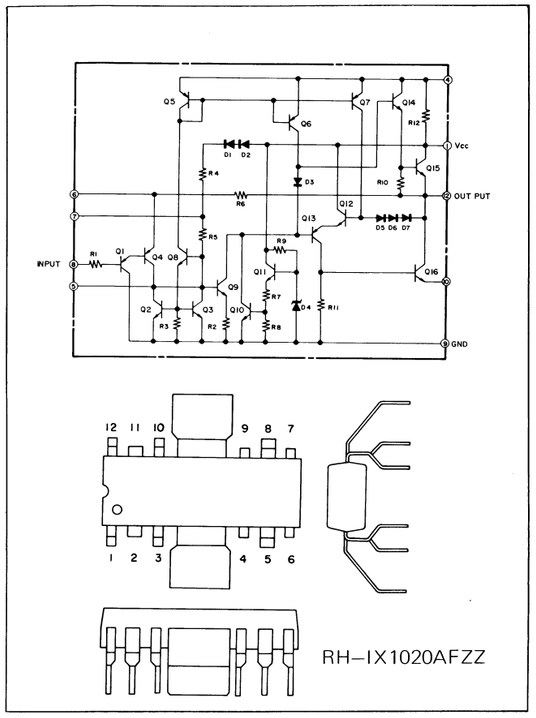

Figure 47 EQUIVALENT CIRCUIT OF IC (IC 301, IC 302)

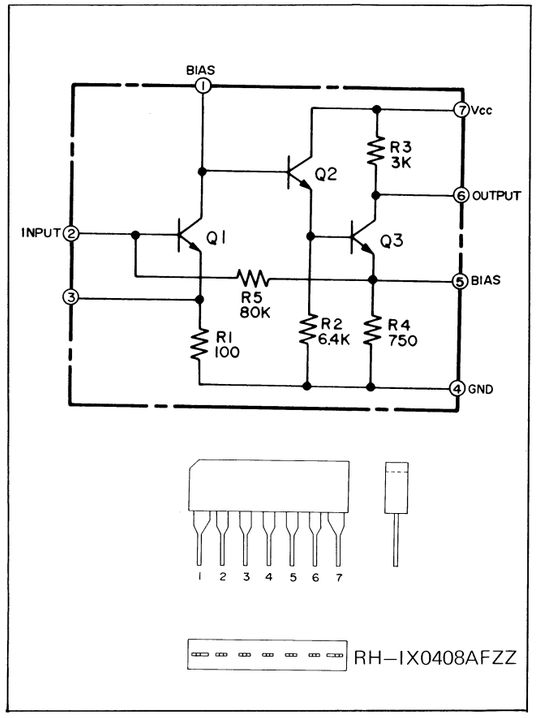

Figure 48 EQUIVALENT CIRCUIT OF IC (IC 401)

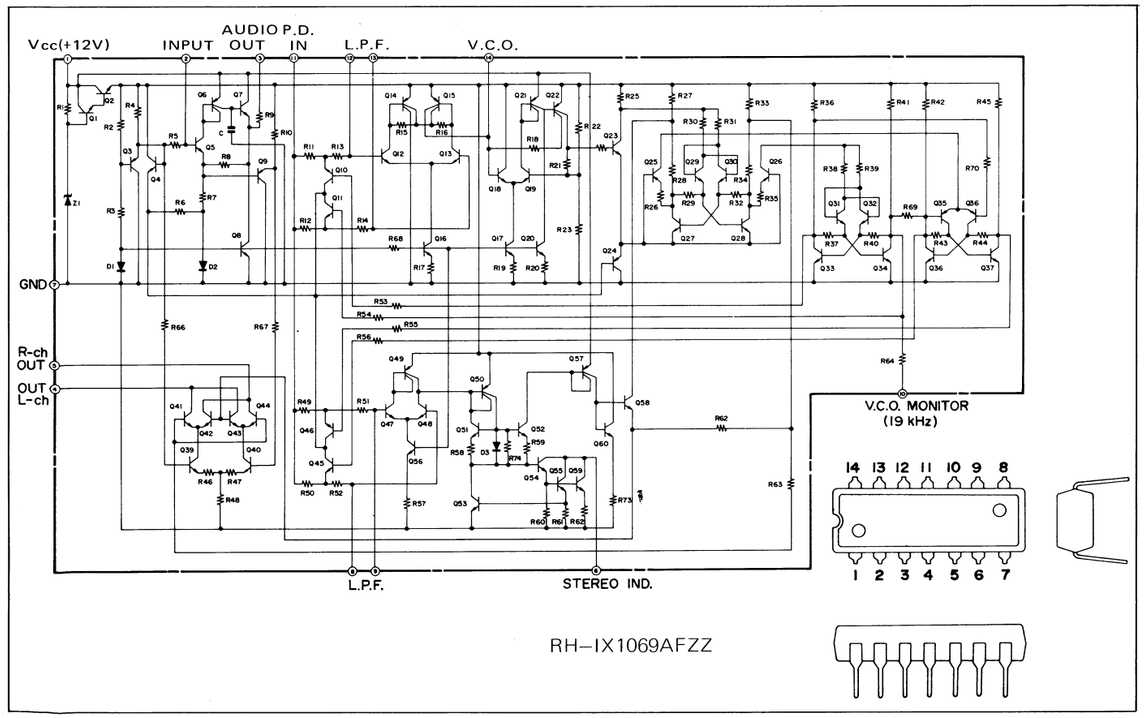

Figure 46 EQUIVALENT CIRCUIT OF IC (IC 2)

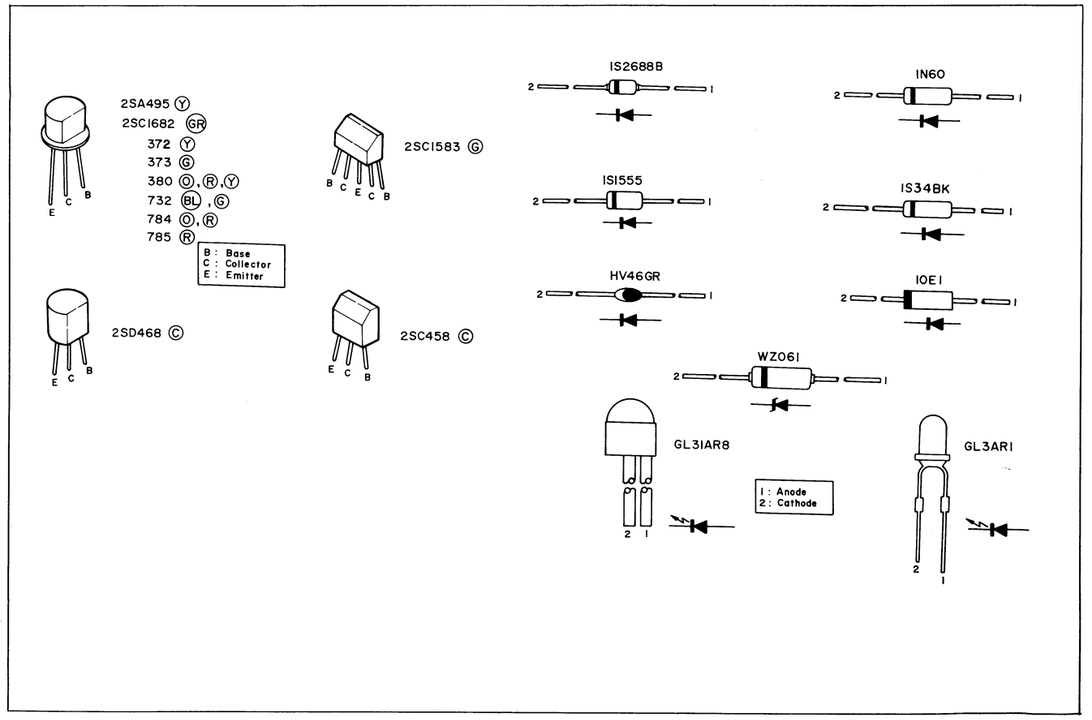

Figure 49 TRANSISTOR, DIODE AND LED

REPLACEMENT PARTS LIST

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.
1. MODEL NUMBER 2. REF. NO.
3. PART NO. 4. DESCRIPTION

REF. NO.	PART NO.	DESCRIPTION	CODE
		INTEGRATED CIRCUITS	
IC1	VHITA7303P/-1	FM IF Amp. (TA7303P)	AM
IC2	RH-IX1069AFZZ	FM MPX (P.L.L.) (HA1156)	AN
IC301, IC302	RH-IX1020AFZZ	Audio Amp. (TBA810SH)	AN
IC401	RH-IX0408AGZZ	APSS Amp. (TA7120)	AM
		TRANSISTORS	
Q1	VS2SC784-O/-1	FM RF Amp. (2SC784Ⓞ)	AG
Q2	VS2SC784-R/1F	FM Mixer (2SC784Ⓡ)	AG
Q3	VS2SC785-R/-1	FM Oscillator (2SC785Ⓡ))	AF
Q4	VS2SC380-R/-1	FM IF Amp. (2SC380Ⓡ)	AF
Q101	VS2SC380-O/-1	AM Mixer (2SC380Ⓞ)	AF
Q102	VS2SC380-R/-1	AM Oscillator (2SC380Ⓡ)	AF
Q103	VS2SC380-O/-1	AM IF Amp. (2SC380Ⓞ)	AF
Q104	VS2SC380-Y/-1	AM IF Amp. (2SC380Ⓨ)	AF
Q201	VS2SC1682GR-1	Equalizer Amp. (2SC1682ⒼⓇ)	AD
Q202	VS2SC732-G/-1	Equalizer Amp. (2SC732ⒼⓇ)	AF
Q203	VS2SC1682GR-1	Equalizer Amp. (2SC1682ⒼⓇ)	AD
Q204	VS2SC732-G/-1	Equalizer Amp. (2SC732ⒼⓇ)	AF
Q205	VS2SC373-G/-1	APSS Mixer (2SC373Ⓖ)	AF
Q206, Q207	VS2SC372-Y/-1	Buffer Amp. (2SC372Ⓨ)	AG
Q208	VS2SC732BL/1F	Record Amp. (2SC732ⒷⓁ)	AD
Q209	VS2SC373-G/-1	Record Amp. (2SC373Ⓖ)	AF
Q210	VS2SC732BL/1F	Record Amp. (2SC732ⒷⓁ)	AD
Q211	VS2SC373-G/-1	Record Amp. (2SC373Ⓖ)	AF
Q212	VS2SC1583G-1F	ALC Amp. (2SC1583Ⓖ)	AF
Q213	VS2SC373-G/-1	ALC Amp. (2SC373Ⓖ)	AF
Q301	VS2SC373-G/-1	DIN Amp. (2SC373Ⓖ)	AF
Q302	VS2SC372-Y/-1	Muting (2SC372Ⓨ)	AG
Q303	VS2SC732-G/-1	Pre. Amp. (2SC732ⒼⓇ)	AF
Q304	VS2SC373-G/-1	DIN Amp. (2SC373Ⓖ)	AF
Q305	VS2SC372-Y/-1	Muting (2SC372Ⓨ)	AG
Q306	VS2SC732-G/-1	Pre. Amp. (2SC732ⒼⓇ)	AF
Q307, Q308	VS2SC372-Y/-1	Meter Amp. (2SC372Ⓨ)	AG
Q309, Q310	VS2SC732-G/-1	Pre. Amp. (2SC732ⒼⓇ)	AF
Q311, Q312	VS2SC372-Y/-1	Matrix Amp. (2SC372Ⓨ)	AG
Q313	VS2SD468-C/-1	Ripple Filter (2SD468Ⓒ)	AE
C401	VS2SA495-Y/-1	APSS, Switching (2SA495Ⓨ)	AD
Q402, Q403	VS2SC372-Y/-1	APSS, Level Comparison ((2SC372Ⓨ)	AG
Q404	VS2SA495-Y/-1	APSS, Plunger Drive (2SA495Ⓨ)	AD
Q405	VS2SD468-C/-1	APSS Plunger Drive (2SD468Ⓒ)	AE
Q501, Q502	VS2SC458-C/-1	APSS, Indicator Switching (2SC458Ⓒ)	AC
Q503, Q504, Q505, Q506	VS2SC458-C/-1	APSS, Indicator Switching (2SC458Ⓒ)	AC
Q601, Q602	VS2SC458-D/-1	Record Bias Oscillator (2SC458Ⓓ)	AF
		DIODES	
D1, D2	VHD1S1555V/1G	Static Protector (1S1555)	AC
D3	VHC1S2688-B1F	FM AFC (1S2688B)	AE
D4	VHD1N60////-1	Signal Meter Bias (1N60)	AB
D5	VHD1S1555V/1G	Signal Meter Bias (1N60)	AC
D6	VHD1S1555V/1G	MPX. Muting at AM (1S1555)	AC
D7	VHPGL3AR1//-1	LED, STEREO Indicator (GL3AR1)	AD
D8	VHD1S1555V/1G	Static Protector (1S1555)	AC
D101	VHD1S34BK//-1	AM Detector (1S34BK)	
D102	VHD1S34BK//-1	AM Tuning Detector (1S34BK)	
D103	VHEWZ061///-1	Zener, Voltage Stabilizer (WZ061)	AE
D104	VHD1S34BK//-1	AM Overload (1S34BK)	
D201, D202	VHD1N60////-1	ALC (1N60)	AB
D203, D204	VHD1S34BK//-1	ALC (1S34BK)	
D301, D302	VHD1S34BK//-1	VU Meter (1S34BK)	AB
D401	VHVHV46-G//-1	APSS Muting (HV46G)	AD
D402	VHD1S1555V/1G	APSS Muting (1S1555)	AC
D501, D502, D503, D504, D505, D506, D507, D508, D509, D510	VHD1S1555V/1G	APSS Indicator Switching (1S1555)	AC
D511, D512, D513	VHPGL31AR8/-1	LED, APSS Indicator (GL31AR8)	
D514	RH-DX1006AFZZ	Counter Voltage Protector (10E-1)	AC
D515	VHD1S1555V/1G	APSS Indicator Switching (1S1555)	AC
D701, D702, D703, D704	VHD10E1////-1	Rectifier (10E-1)	AC

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	CODE
		COILS	
L1, L2	RCILR0112AFZZ	FM RF	AA
L3, L4	RCILR0089AFZZ	FM Oscillator	AA
L5	RCILC0030AFZZ	FM IF Trap	AC
L6	RCILA0255AFZZ	SW Antenna	AE
L7	RCILA0408AFZZ	MW/LW Antenna	AN
L8	RCILB0309AFZZ	SW Oscillator	AE
L9	RCILB0389AFZZ	MW Oscillator	AD
L10	RCILB0353AFZZ	LW Oscillator	AD
L11	RCILF0014AGZZ	Choke	AC
L101	RCILF0014AGZZ	Choke	AC
L501	RCILF0014AGZZ	Choke	AC
L601	RCILB0086AGZZ	Bias Oscillator	AF
L602, L603	RCILB0376AFZZ	Bias Step-up	AE
		TRANSFORMERS	
T1	RCILI0157AFZZ	FM IF	AD
T2	RCILI0208AFZZ	FM IF	AD
T101	RCILI0224AFZZ	AM IF (455kHz)	AH
T102	RCILI0170AFZZ	AM IF	AD
T201, T202	RTRNI0065AFZZ	Recording	AF
T701	RTRNP0504AFZZ	Power (GF-9090H, HB)	AW
	RTRNP0509AFZZ	Power (GF-9090E)	
		FILTERS	
CF101, CF102	RFILF0009AFZZ	FM Ceramic Filter (10.7MHz)	AE
		PACKAGED CIRCUITS	
M1	RFILF0056AFZZ	B.P.F. FM ANT.	AE
M2, M3	RMPTA0064AFZZ	MPX. Filter	AE
M101	RMPTA0102AFZZ	Low Pass Filter	AC
		CONTROLS	
VC1, VC2, VC101, VC102, TC3, TC4, TC104, TC107	RVC-R0057AFZZ	Variable Capacitors, Tuning with Trimmers TC3: FM RF Trimmer TC4: FM Oscillation Trimmer TC104: MW Antenna Trimmer TC107: MW Oscillation Trimmer	AQ
TC103, TC105	RTO-H2050AFZZ	Trimmer Assembly TC103: SW Antenna Trimmer TC105: LW Antenna Trimmer	AD
TC106	RTO-H1007AFZZ	SW Oscillation Trimmer	AC
TC108	RTO-H1007AFZZ	LW Oscillation Trimmer	AC
VR1	RVR-M0126AFZZ	5K ohm (B), P.L.L. VCO Adjust	AC
VR201, VR202	RVR-P0062AFZZ	50K ohm (A), RECORD	AA
VR301 (A, B)	RVR-Q0058AFZZ	20K ohm (B), VOLUME	AH
VR302 (A, B)	RVR-P0061AFZZ	100K ohm (A), TREBLE	AA
VR303 (A, B)	RVR-P0061AFZZ	100K ohm (A), BASS	AA
VR304	RVR-Q0059AFZZ	50K ohm (B), BALANCE	AC
VR305, VR306	RVR-M0003SGZZ	5K ohm (B), Meter Sensitivity Adjust	AC
VR601, VR602	RVR-M0126AFZZ	5K ohm (B), Bias Current Adjust	AC
		CAPACITORS (Unless otherwise specified capacitors are 50V, +80 −20%, Ceramic type.)	
C5	VCKSPU2GL221M	220PF, 400V (AC), ±20%, Ceramic	AE
C7	VCCSPU1HL100F	10PF, 50V, ±1PF, Ceramic	AD
C8	VCKZPU1HF102Z	.001MFD	AH
C9	VCCSPU1HL220J	22PF, 50V, ±5%, Ceramic	AD
C10	VCKYPU1HB222M	.0022MFD, 50V, ±20%, Ceramic	AF
C11	VCCSPU1HL5R0C	5PF, 50V, ±.25PF, Ceramic	AW
C12	VCCCPU1HH1R0C	1PF, 50V, ±.25PF, Ceramic	AD
C13	VCCSPU1HL101J	100PF, 50V, ±5%, Ceramic	AH
C14	VCKYPU1HB472M	.0047MFD, 50V, ±20%, Ceramic	AD
C15	VCKZPU1HF223Z	.022MFD	AF
C17	VCKYPU1HB222M	.0022MFD, 50V, ±20%, Ceramic	AW
C18	VCCUPU1HJ150J	15PF, 50V, ±5%, Ceramic	AD
C19	VCCCPU1HH6R0C	6PF, 50V, ±.25PF, Ceramic	AC
C20	VCKZPU1HF103Z	.01MFD	AC
C22, C23, C24, C25,	VCKZPU1HF103Z	.01MFD	AC
C26	VCCSPU1HL100F	10PF, 50V, ±1PF, Ceramic	AD
C27	VCKZPU1HF103Z	.01MFD	AC
C29	VCKZPU1HF333P	.033MFD, 50V, +100 −0%, Ceramic	AC
C30	VCKZPU1HF223Z	.022MFD	AC
C31	VCCSPU1HL221J	220PF, 50V, ±5%, Ceramic	AC
C32	VCKZPU1HF223Z	.022MFD	AC
C33	VCQYKU1HM103M	.01MFD, 50V, ±20%, Mylar	AB
C34	VCQYKU1HM473M	.047MFD, 50V, ±20%, Mylar	AC
C35	VCQYKU1HM222M	.0022MFD, 50V, ±20%, Mylar	AB
C36	VCKZPU1HF223Z	.022MFD	AC
C38	VCKZPU1HF103Z	.01MFD	AC
C42	VCQSMU1HS471J	470PF, 50V, ±5%, Styrol	AB
C43	VCQYKU1HM153M	.015MFD, 50V, ±20%, Mylar	AB
C44	VCKZPU1HF103Z	.01MFD	AC
C45	VCQYKU1HM153M	.015MFD, 50V, ±20%, Mylar	AB
C46, C47	VCCSPU1HL331J	330PF, 50V, ±5%, Ceramic	AC
C48	VCCUPU1HJ180J	18PF, 50V, ±5%, Ceramic	AC
C50, C51	VCKZPU1HF103Z	.01MFD	AC
C52	VCCSPU1HL3R0C	3PF, 50V, ±.25PF, Ceramic	AC
C53	VCKSPU2GL221M	220PF, 400V (AC), ±20%, Ceramic	AE
C54	VCKYPU1HB472M	.0047MFD, 50V, ±20%, Ceramic	AD
C55	VCKZPU1HF223Z	.022MFD	AH
C56	VCKZPU1HF103Z	.01MFD	AD
C57	VCKYPU1HB223M	.022MFD, 50V, ±20%, Ceramic	AF
C58, C59	VCCSPU1HL181J	180PF, 50V, ±5%, Ceramic	AW
C60	VCCCPU1HH3R0C	3PF, 50V, ±.25PF, Ceramic	AD
C61	VCKZPU1HF102Z	.001MFD	AH

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	CODE
C109	VCCSPU1HL5R0C	5PF, 50V, ±.25PF, Ceramic	
C110	VCCSPU1HL3R0C	3PF, 50V, ±.25PF, Ceramic	
C111	VCCSPU1HL5R0C	5PF, 50V, ±.25PF, Ceramic	
C112	VCCSPU1HL390J	39PF, 50V, ±5%, Ceramic	
C113	VCQSMT1HS332J	3300PF, 50V, ±5%, Styrol	AB
C114	VCCSPU1HL271J	270PF, 50V, ±5%, Ceramic	
C115	VCCSPU1HL221J	220PF, 50V, ±5%, Ceramic	
C116	VCCCPU1HH5R0C	5PF, 50V, ±.25PF, Ceramic	
C117	VCCCPU1HH8R0D	8PF, 50V, ±.5PF, Ceramic	
C118	VCCCPU1HH180J	18PF, 50V, ±5%, Ceramic	
C119	VCCSPU1HL151J	150PF, 50V, ±5%, Ceramic	
C120	VCKZPU1HF223Z	.022MFD	
C121	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C122	VCQYKU1HM223M	.022MFD, 50V, ±20%, Mylar	AB
C123	VCQYKU1HM473M	.047MFD, 50V, ±20%, Mylar	AC
C124, C125	VCKZPU1HF223Z	.022MFD	
C126	VCKZPU1HF103Z	.01MFD	
C130, C131, C132	VCKZPU1HF223Z	.022MFD	
C133	VCKZPU1HF222Z	.0022MFD	
C134, C135	VCKZPU1HF223Z	.022MFD	
C137	VCKZPU1HF103Z	.01MFD	
C140, C142	VCKZPU1HF223Z	.022MFD	
C143	VCQYKU1HM103M	.01MFD, 50V, ±20%, Mylar	AB
C151	VCQYKU1HM333M	.033MFD, 50V, ±20%, Mylar	AB
C205	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C206	VCCSPU1HL271J	270PF, 50V, ±5%, Ceramic	
C207	VCCSPU1HL221J	220PF, 50V, ±5%, Ceramic	
C210	VCQYKU1HM333K	.033MFD, 50V, ±10%, Mylar	AB
C212	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C213	VCCSPU1HL271J	270PF, 50V, ±5%, Ceramic	
C214	VCCSPU1HL221J	220PF, 50V, ±5%, Ceramic	
C217	VCQYKU1HM333K	.033MFD, 50V, ±10%, Mylar	AB
C218	VCKZPU1HF223Z	.022MFD	
C224	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C225	VCCSPU1HL680J	68PF, 50V, ±5%, Ceramic	
C230, C231	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C232	VCQYKU1HM472K	.0047MFD, 50V, ±10%, Mylar	AB
C234	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C235	VCCSPU1HL680J	68PF, 50V, ±5%, Ceramic	
C240, C241	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C242	VCQYKU1HM472K	.0047MFD, 50V, ±10%, Mylar	AB
C246, C247	VCCSPU1HL221J	220PF, 50V, ±5%, Ceramic	
C304	VCCSPU1HL151J	150PF, 50V, ±5%, Ceramic	
C307	VCQYKU1HM392M	.0039MFD, 50V, ±20%, Mylar	AA
C311	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C312	VCQYKU1HM223M	.022MFD, 50V, ±20%, Mylar	AB
C313	VCQYKU1HM333M	.033MFD, 50V, ±20%, Mylar	AB
C318	VCCSPU1HL151J	150PF, 50V, ±5%, Ceramic	
C321	VCQYKU1HM392M	.0039MFD, 50V, ±20%, Mylar	AA
C332	VCQYKU1HM223M	.022MFD, 50V, ±20%, Mylar	AB
C333	VCQYKU1HM682M	.0068MFD, 50V, ±20%, Mylar	AB
C336	VCQYKU1HM682M	.0068MFD, 50V, ±20%, Mylar	AB
C337	VCQYKU1HM223M	.022MFD, 50V, ±20%, Mylar	AB
C338	VCKZPU1HF103Z	.01MFD	
C340	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C345	VCQYKU1HM152K	.0015MFD, 50V, ±20%, Mylar	AB
C346	VCQYKU1HM682M	.0068MFD, 50V, ±20%, Mylar	AB
C350	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C356	VCQYKU1HM682M	.0068MFD, 50V, ±20%, Mylar	AB
C357	VCQYKU1HM152K	.0015MFD, 50V, ±20%, Mylar	AB
C362	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C363	VCQYKU1HM223M	.022MFD, 50V, ±20%, Mylar	AB
C365	VCQYKU1HM333M	.033MFD, 50V, ±20%, Mylar	AB
C366	VCQYKU1HM223M	.022MFD, 50V, ±20%, Mylar	AB
C367, C368	VCCSPU1HL151J	150PF, 50V, ±5%, Ceramic	
C371, C372	VCQYKU1HM102K	.001MFD, 50V, ±10%, Mylar	AB
C373	VCQYKU1HM223M	.022MFD, 50V, ±20%, Mylar	AB
C401	VCKZPU1HF223Z	.022MFD	
C402	VCCSPU1HL220J	22PF, 50V, ±5%, Ceramic	
C503, C504, C505	VCKZPU1HF102Z	.001MFD	
C506	VCKYPU1HB472M	.0047MFD, 50V, ±20%, Ceramic	
C508	VCKZPU1HF102Z	.001MFD	
C602	VCQYKU1HM273K	.027MFD, 50V, ±10%, Mylar	AB
C603	VCQYKU1HM103M	.01MFD, 50V, ±20%, Mylar	AB
C605	VCQYKU1HM563K	.056MFD, 50V, ±10%, Mylar	AC
C606, C607	VCQYKU1HM103K	.01MFD, 50V, ±10%, Mylar	AB
C608	VCQYKU1HM153M	.015MFD, 50V, ±20%, Mylar	AB
C701, C702	VCKZPU1HF223Z	.022MFD	
C703	VCKZPU1HF104Z	.1MFD	

ELECTROLYTIC CAPACITORS

C16	VCEAAU1CW476Y	47MFD, 16V, +50 −10%	AC
C21	VCEALU1HW474M	.47MFD, 50V, ±20%	AB
C28	VCEAAU1CW476Y	47MFD, 16V, +50 −10%	AC
C37	VCEAAU1CW477Y	470MFD, 16V, +50 −10%	AD
C39	VCEAAU1HW105A	1MFD, 50V, +75−10%	AB
C40	VCEALU1HW474M	.47MFD, 50V, ±20%	AB
C41	VCEALU1HW224M	.22MFD, 50V, ±20%	AB
C49	VCEAAU1EW475A	4.7MFD, 25V, +75−10%	AB
C136	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C138	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C141, C144, C145	VCEAAU1EW475A	4.7MFD, 25V, +75−10%	AB
C146	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C150	VCEALU1HW104M	.1MFD, 50V, ±20%	AB
C201, C202	VCEALU1HW334M	.33MFD, 50V, ±20%	AB
C203	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C204	VCEAAU1EW335A	3.3MFD, 25V, +75 −10%	AB
C208, C209	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C211	VCEAAU1EW335A	3.3MFD, 25V, +75 −10%	AB
C215, C216	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C219, C220, C221, C222	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C223	VCEALU1HW104M	.1MFD, 50V, ±20%	AB
C226	VCEAAU0JW337Y	330MFD, 6.3V, +50 −10%	AC
C227	VCEAAU1AW336Y	33MFD, 10V, +50 −10%	AB
C228	VCEAAU1AW227Y	220MFD, 10V, +50 −10%	AC
C229	VCEAAU1AW336Y	33MFD, 10V, +50 −10%	AB
C233	VCEALU1HW104M	.1MFD, 50V, ±20%	AB

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	CODE
C236	VCEAAU0JW337Y	330MFD, 6.3V, +50 −10%	AC
C237	VCEAAU1AW336Y	33MFD, 10V, +50 −10%	AB
C238	VCEAAU1AW227Y	220MFD, 10V, +50 −10%	AC
C239	VCEAAU1AW336Y	33MFD, 10V, +50 −10%	AB
C243	VCEAAU1HW105A	1MFD, 50V, +75 −10%	AB
C244	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C301	VCEAAU1HW105A	1MFD, 50V, +75 −10%	AB
C302, C303	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C305	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C306	VCEALU1HW474M	.47MFD, 50V, ±20%	AB
C308	VCEALU1HW224M	.22MFD, 50V, ±20%	AB
C309	VCEALU1HW105M	1MFD, 50V, ±20%	AD
C310	VCEALU1HW474M	.47MFD, 50V, ±20%,	AB
C314	VCEALU1HW104M	.1MFD, 50V, ±20%	AB
C315	VCEAAU1HW105A	1MFD, 50V, +75 −10%	AB
C316, C317	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C319	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C320	VCEALU1HW474M	.47MFD, 50V, ±20%	AB
C322	VCEALU1HW224M	.22MFD, 50V, ±20%	AB
C323	VCEALU1HW105M	1MFD, 50V, ±20%	AD
C324	VCEALU1HW474M	.47MFD, 50V, ±20%	AB
C325, C326	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C327, C328	VCEAAU1HW105A	1MFD, 50V, +75 −10%	AB
C329	VCEALU1HW105M	1MFD, 50V, ±20%	AD
C330	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C331	VCEAAU1CW108Y	1000MFD, 16V, +50 −10%	AE
C334	VCEALU1HW105M	1MFD, 50V, ±20%	AD
C335	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C339	VCEAAU1CW107Y	100MFD, 16V, +50 −10%	AC
C341	VCEALU1HW104M	.1MFD, 50V, ±20%	AB
C342, C343, C344	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C347	VCEAAU1AW108Y	1000MFD, 10V, +50 −10%	AD
C348	VCEALU1HW104M	.1MFD, 50V, ±20%	AB
C349	VCE9AT1SD475M	4.7MFD, 30V, ±20%	AD
C351	VCEALU1HW104M	.1MFD, 50V, ±20%	AB
C352, C353, C354	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C355	VCEALU1HW104M	.1MFD, 50V, ±20%	AB
C358	VCEAAU1AW108Y	1000MFD, 10V, +50 −10%	AD
C359	VCE9AT1SD475M	4.7MFD, 30V, ±20%	AD
C361	VCEAAU1EW228Y	2200MFD, 25V, +50 −10%	AH
C364, C369, C370	VCEALU1HW104M	.1MFD, 50V, ±20%	AB
C374	VCEAAU1AW107Y	100MFD, 10V, +50 −10%	AB
C403	VCEAAU1EW335A	3.3MFD, 25V, +75 −10%	AB
C404	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C405	VCEAAU1HW105A	1MFD, 50V, +75 −10%	AB
C406	VCEALU1HW335M	3.3MFD, 50V, ±20%	AC
C407	VCEAAU1CW107Y	100MFD, 16V, +50 −10%	AC
C501, C502	VCEAAU1CW106Y	10MFD, 16V, +50 −10%	AB
C507	VCEAAU1CW227Y	220MFD, 16V, +50 −10%	
C604	VCEAAU1CW107Y	100MFD, 16V, +50 −10%	AC

REF. NO.	PART NO.	DESCRIPTION	CODE
		RESISTORS	
		(Unless otherwise specified resistors are 1/4W, ±5%, Carbon type.)	
R1	VRD-ST2EE102J	1K ohm	
R13	VRD-ST2EE224J	220K ohm	
R14	VRD-ST2EE474J	470K ohm	
R20	VRD-ST2EE331J	330 ohm	
R21	VRD-ST2EE103J	10K ohm	
R22	VRD-ST2EE333J	33K ohm	
R23	VRD-ST2EE560J	56 ohm	
R27	VRD-ST2EE103J	10K ohm	
R28	VRD-ST2EE472J	4.7K ohm	
R30	VRD-ST2EE150J	15 ohm	
R32	VRD-SU2BY163J	16K ohm, 1/8W, ±5%, Carbon	
R101	VRD-ST2EE100J	10 ohm	
R102	VRD-SU2EY152J	1.5K ohm	
R104	VRD-SU2EY100J	10 ohm	
R106	VRD-SU2EY121J	120 ohm	
R108	VRD-SU2EY471J	470 ohm	
R109	VRD-SU2EY121J	120 ohm	
R112	VRD-SU2EY223J	22K ohm	
R116	VRD-ST2EE152J	1.5K ohm	
R121, R126	VRD-ST2EE221J	220 ohm	
R127	VRD-ST2EE183J	18K ohm	
R129	VRD-SU2EY103J	10K ohm	
R130	VRD-SU2EY222J	2.2K ohm	
R131	VRD-ST2EE101J	100 ohm	
R132	VRD-ST2EE152J	1.5K ohm	
R201, R202	VRD-ST2EE101J	100 ohm	
R203, R204	VRD-SU2EY562J	5.6K ohm	
R209, R210	VRD-ST2EE102J	1K ohm	
R212	VRD-ST2EE223J	22K ohm	
R213	VRD-ST2EE392J	3.9K ohm	
R214	VRD-ST2EE151J	150 ohm	
R215	VRD-ST2EE104J	100K ohm	
R216	VRD-ST2EE102J	1K ohm	
R217	VRD-ST2EE272J	2.7K ohm	
R218	VRD-ST2EE392J	3.9K ohm	
R219	VRD-ST2EE563J	56K ohm	
R220	VRD-ST2EE392J	3.9K ohm	
R222	VRD-ST2EE223J	22K ohm	
R223	VRD-ST2EE392J	3.9K ohm	
R224	VRD-ST2EE151J	150 ohm	
R225	VRD-ST2EE104J	100K ohm	
R226	VRD-ST2EE102J	1K ohm	
R227	VRD-ST2EE272J	2.7K ohm	
R228	VRD-ST2EE392J	3.9K ohm	
R229	VRD-ST2EE563J	56K ohm	
R230	VRD-ST2EE392J	3.9K ohm	
R239	VRD-ST2EE470J	47 ohm	
R241	VRD-ST2EE153J	15K ohm	
R243	VRD-ST2EE101J	100 ohm	
R245	VRD-ST2EE333J	33K ohm	
R246	VRD-ST2EE563J	56K ohm	
R249	VRD-ST2EE470J	47 ohm	
R251	VRD-ST2EE153J	15K ohm	
R253	VRD-ST2EE101J	100 ohm	
R255	VRD-ST2EE333J	33K ohm	
R256	VRD-ST2EE563J	56K ohm	
R257, R258	VRD-ST2EE472J	4.7K ohm	
R259	VRD-ST2EE153J	15K ohm	

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	CODE
R260, R261	VRD-ST2EE272J	2.7K ohm	
R267, R268	VRD-ST2EE223J	22K ohm	
R269, R270	VRD-ST2EE472J	4.7K ohm	
R302	VRD-ST2EE152J	1.5K ohm	
R304	VRD-ST2EE151J	150 ohm	
R308	VRD-ST2EE102J	1K ohm	
R309	VRD-ST2EE121J	120 ohm	
R311	VRD-ST2EE182J	1.8K ohm	
R312	VRD-ST2EE682J	6.8K ohm	
R314	VRD-ST2EE274J	270K ohm	
R315	VRD-ST2EE182J	1.8K ohm	
R316	VRD-ST2EE121J	120 ohm	
R318	VRD-ST2EE152J	1.5K ohm	
R320	VRD-ST2EE151J	150 ohm	
R324	VRD-ST2EE102J	1K ohm	
R325	VRD-ST2EE121J	120 ohm	
R327	VRD-ST2EE182J	1.8K ohm	
R328	VRD-ST2EE682J	6.8K ohm	
R330	VRD-ST2EE274J	270K ohm	
R331	VRD-ST2EE182J	1.8K ohm	
R332	VRD-ST2EE121J	120 ohm	
R333, R334	VRD-ST2EE273J	27K ohm	
R335, R336	VRD-ST2EE473J	47K ohm	
R341	VRD-SU2EY473J	47K ohm	
R342, R343	VRD-ST2EE822J	8.2K ohm	
R344	VRD-SU2EY122J	1.2K ohm	
R346	VRD-ST2EE562J	5.6K ohm	
R347	VRD-ST2EE183J	18K ohm	
R349	VRD-ST2EE472J	4.7K ohm	
R350	VRD-SU2EY474J	470K ohm	
R351	VRD-SU2EY472J	4.7K ohm	
R352	VRD-ST2EE103J	10K ohm	
R353	VRD-SU2EY472J	4.7K ohm	
R354	VRD-SU2EY273J	27K ohm	
R357, R358	VRD-ST2EE273J	27K ohm	
R361	VRD-ST2EE562J	5.6K ohm	
R362	VRD-ST2EE472J	4.7K ohm	
R363	VRD-ST2EE183J	18K ohm	
R365	VRD-SU2EY474J	470K ohm	
R367, R368	VRD-SU2EY472J	4.7K ohm	
R369	VRD-ST2EE103J	10K ohm	
R370	VRD-SU2EY273J	27K ohm	
R371	VRD-ST2EE101J	100 ohm	
R372	VRD-ST2EE2R2J	2.2 ohm	
R373	VRD-ST2EE3R9J	3.9 ohm	
R374	VRD-ST2EE221J	220 ohm	
R375	VRD-ST2EE470J	47 ohm	
R377	VRD-ST2EE101J	100 ohm	
R378	VRD-ST2EE2R2J	2.2 ohm	
R379	VRD-ST2EE221J	220 ohm	
R380	VRD-ST2EE3R9J	3.9 ohm	
R381	VRD-ST2EE681J	680 ohm	
R382	VRD-ST2EE101J	100 ohm	
R383, R384	VRD-ST2EE563J	56K ohm	
R405	VRD-ST2EE822J	8.2K ohm	
R406	VRD-ST2EE330J	33 ohm	
R413	VRD-ST2EE561J	560 ohm	
R501	VRD-SU2BY332J	3.3K ohm, 1/8W, ±5%, Carbon	
R502, R503	VRD-SU2BY223J	22K ohm, 1/8W, ±5%, Carbon	
R504	VRD-ST2EE332J	3.3K ohm	
R505	VRD-ST2EE272J	2.7K ohm	
R506	VRD-SU2BY153J	15K ohm, 1/8W, ±5%, Carbon	
R507	VRD-ST2EE153J	15K ohm	
R508	VRD-ST2EE272J	2.7K ohm	
R509, R510	VRD-ST2EE223J	22K ohm	
R511, R512, R513	VRD-ST2EE561J	560 ohm	
R514, R515	VRD-ST2EE223J	22K ohm	
R516	VRD-ST2EE562J	5.6K ohm	
R517	VRD-ST2EY103J	10K ohm	
R603	VRD-SU2EY1R0J	1 ohm	
R604	VRD-ST2EE330J	33 ohm	
R605	VRD-ST2EE560J	56 ohm	
R608	VRD-ST2EE220J	22 ohm	

MECHANICAL PARTS

001	JKNBB0055AFSC	Knob, STOP	AG
002	JKNBB0056AFSC	Knob, Forward APSS	AF
003	JKNBB0057AFSC	Knob, Reverse APSS	AF
004	JKNBM0240APSE	Knob, EJECT/REW/PLAY/F.F/PAUSE	AE
005	JKNBM0240AFSF	Knob, RECORD	AC
006	LANGF0376AFFW	Plate, Sub Chassis Stopper	AB
007	LANGF0393AFFW	Bracket, Muting Switch	AC
008	LANGT0514AFZZ	Bracket, Flywheel	AF
009	LBSHS0001AG00	Bushing, Motor	AA
010	LCHSM0228AFZZ	Mechanism Chassis Assembly	
011	LCHSS0107AF00	Sub Chassis Assembly	
012	LHLDW3007AGZZ	Holder, Wire	
013	LSTWC2001AFZZ	Stop Washer, 2ϕ	
014	LSTWC2403AFZZ	Stop Washer, 2.4ϕ	
015	LSTWC3002AFZZ	Stop Washer, 3ϕ	
016	LX-BZ0107AGZZ	Screw, Flywheel Thrust Adjust	AB
017	LX-BZ0148AGFD	Screw, Motor	AA
018	LX-HZ0056AFFD	Screw, Flywheel Bracket and Muting Switch	
019	LX-WZ5013AGZZ	Washer, Erase Head	AA
020	LX-WZ5015AGZZ	Washer, Detect Lever	AA
021	LX-WZ5018AGZZ	Washer, Slip Roller and Gear	AA
022	LX-WZ5037AGZZ	Washer, Flywheel	AA
023	LX-WZ7050AFZZ	Spacer, Motor Switch	AA
024	MARMP0001AFZZ	Arm, Auto Stop	AC
025	MARMP0002AFZZ	Arm, Auto Stop Lock Reset	AC
026	MLEVF0547AFZZ	Lever, Main Lock Plate	AD
027	MLEVF0548AFZZ	Lever, APSS Lock Plate	AD
028	MLEVF0549AFZZ	Idler, Take-up	AG
029	MLEVF0550AFFW	Lever, Pause	AD
030	MLEVF0551AFFW	Lever, Fast Forward/Rewind	AD
031	MLEVF0553AFFW	Lever, Eject	AD
032	MLEVF0555AFZZ	Lever, Forward APSS	AD
033	MLEVF0556AFZZ	Lever, Reverse APSS	AD
034	MLEVF0557AFFW	Lever, Fast Forward/Rewind	AE
035	MLEVF0558AFFW	Lever, Fast Forward	AD
036	MLEVF0560AFFW	Lever, Record Mistake Proof	AC
037	MLEVF0564AFFW	Lever, Stop	AC
038	MLEVF0617AFZZ	Lever, Quick Stop	AB
039	MLEVF0618AFZZ	Lever, Pause Mistake Proof	AC
040	MLEVF0643AFZZ	Lever, Play	AG
041	MLEVF0702AFZZ	Lever, Record	AD

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	CODE
042	MLEVP0057AF00	Lever, Erase Proof	AC
043	MLEVP0058AFZZ	Lever, Brake	AC
044	MLEVP0060AFZZ	Lever, Auto Stop	AC
045	MLEVP0061AFZZ	Lever, Tape End Detect	AB
046	MLEVP0062AFZZ	Lever, Fast Forward	AB
047	MLEVP0063AFZZ	Lever, Sub Chassis Return	AC
048	MLEVP0076AFZZ	Lever, Pause Mistake Proof	AC
049	MLEVP0077AFZZ	Lever, Cassette Lock	AC
050	MSPRC0031AGMN	Spring, REC/P.B. Head Adjust	AA
051	MSPRC0109AFFJ	Spring, Plunger	AA
052	MSPRC0110AFFJ	Spring, Play Lever	AA
053	MSPRC0111AFFJ	Spring, Detect Lever	AA
054	MSPRC0115AFFJ	Spring, Supply Turntable	AA
055	MSPRC0139AFFJ	Spring, EJECT/REW/REC/F.F/PAUSE	AA
056	MSPRD0107AFFJ	Spring, Pinch Roller Assembly	AB
057	MSPRD0108AFFJ	Spring, Brake Lever	AA
058	MSPRD0109AFFJ	Spring, Forward APSS Lever	AA
059	MSPRD0110AFFJ	Spring, Reverse APSS Lever	AA
060	MSPRD0111AFFJ	Spring, Stop Lever	AB
061	MSPRD0112AFFJ	Spring, Erase Proof Lever	AA
062	MSPRD0116AFFJ	Spring, Auto Stop Lock Reset Arm	AB
063	MSPRD0117AFFJ	Spring, Record Mistake Proof	AA
064	MSPRD0137AFFJ	Spring, Quick Stop Lever	AA
065	MSPRP0113AFFJ	Spring (Plate type), Auto Stop Arm	AB
066	MSPRP0115AFFW	Spring (Plate type), Sub Chassis Stopper	AC
067	MSPRP0133AFFW	Spring (Plate type), Cassette Retaining	AC
068	MSPRT0151AGFJ	Spring, Cassette Lock Lever	AA
069	MSPRT0330AFFJ	Spring, Play Lever	AA
070	MSPRT0331AFFJ	Spring, Fast Forward/Rewind Lever	AA
071	MSPRT0332AFFJ	Spring, Idler	AA
072	MSPRT0333AFFJ	Spring, Roller Assembly	AA
073	MSPRT0334AFFJ	Spring, Auto Stop Lever	AA
074	MSPRT0335AFFJ	Spring, Fast Forward/Rewind Lever	AA
075	MSPRT0389AFFJ	Spring, Pause Mistake Proof Lever	AA
076	MSPRT0390AFFJ	Spring, Pause Mistake Proof Lever	AB
077	NBALS0004AGFJ	Ball 3ϕ	AA
078	NBLTH0051AF00	Belt, Motor	AD
079	NBLTK0053AF00	Belt, Auto Stop	AC
080	NBRGC0054AFZZ	Bearing, Flywheel Shaft	AG
081	NDAIR0110AFSA	Turntable, Take-up	
082	NDAIR0111AFSA	Turntable, Supply	
083	NFLYC0053AFZZ	Flywheel	AH
084	NGERH0050AFZZ	Gear, Slip Roller	AC
085	NGERP0050AFZZ	Slip Roller	AC
086	NPLYR0050AFZZ	Pulley, Take-up	AB
087	NPLYR0052AFZZ	Pulley, Auto Stop	AB
088	NROLM0051AFFW	Roller, Lock Plate	AA
089	NROLV0004AFZZ	Roller Assembly	AQ
090	NROLY0004AFZZ	Pinch Roller Assembly	AF
091	PCUSG0026AG00	Rubber, Brake Lever	AB
092	PFLT-0313AF00	Washer (Felt), Detect Lever	AA
093	PSLDM3124AFZZ	Shield, Motor Noise	AB
094	PSPAA0001AGFJ	Spacer, Motor Bushing	AB
095	PZETF0123AFZZ	Stopper	AA
096	QHWS-2222AGFN	Lug Terminal, Ground	
097	QHWS-3001AGFN	Lug Terminal, Ground	
098	QPWBF0584AFZZ	P.W. Board, Motor	
099	QPWBF0625AFZZ	P.W. Board, APSS Indicator	
100	RHEDA0059AFZZ	Head, Erase	AK
101	RHEDH0052AFZZ	Head, Record/Play Back	AW
102	RMOTM0067AFZZ	Motor with Pulley	AX
103	KCOUB0061AFZZ	Counter	
104	NBLTK0105AFZZ	Belt, Counter	AC

MISCELLANEOUS

REF. NO.	PART NO.	DESCRIPTION	CODE
201	GCABA1451AFSA	Cabinet, Front (GF-9090H, HB)	
	GCABA1452AFSA	Cabinet, Front (GF-9090E)	
202	GCABB1438AFSA	Cabinet, Back	AY
203	GCOVA1083AFSA	Cover, APSS Indicator (LED)	AB
204	GFTAB1104AFSA	Lid, Battery Compartment	AE
205	GFTAC1069AFSA	Holder, Cassette	AM
206	GWAKP9003AFSA	Cabinet, Operation Plate	AR
207	HDALM0179AFSA	Plate, Dial Scale	AK
208	HDECA0275AFSA	Decoration Ring, Woofer	AS
209	HDECA0276AFSA	Plate, Operation	AU
210	HDECB0064AFSA	Decoration Ring, Tweeter	AG
211	HINDM1133AFSB	Indication Metal, SHARP	AA
212	HINDM1153AFSA	Indication Metal, Model Spec. (GF-9090H, HB)	AD
	HINDM1160AFSA	Indication Metal, Model Spec. (GF-9090E)	AD
213	HINDM1154AFSA	Indication Metal, Voltage Selector Switch (GF-9090H)	AC
	HINDM1161AFSA	Indication Metal, Main Switch (GF-9090E)	AC
214	HINDM1155AFSA	Indication Metal, Model	AD
215	HINDM1156AFSA	Indication Metal, EXT. SP./EXT. ANT.	AD
216	HPNC-0106AFSA	Punching Metal, Tweeter	AE
217	HPNC-0107AFSA	Punching Metal, Woofer	AL
218	HSSND0233AFSA	Pointer, Dial Scale	AD
219	JHNDG1055AFSA	Handle	AX
220	JKNBM0249AFSA	Knob, Push Switch (BAND, AFC, MUTING)	AE
221	JKNBM0253AFSA	Knob, Push Switch (TAPE/RADIO)	AF
222	JKNBN0309AFSA	Knob, Tuning	AC
223	JKNBP0073AFSA	Knob, VOLUME/BALANCE/TREBLE/BASS/RECORD	AE
224	JKNBZ0108AFSA	Knob, LIGHT	AB
225	JKNBZ0109AFSA	Knob, MODE/TAPE Selector/ALC/LOUDNESS/METER	AB
226	JKNBZ0127AFSB	Knob, EDIT	AF
227	LANGK0183AFFW	Bracket, Main P.W. Board Retaining	AB
228	LANGQ0511AFFW	Bracket, Main P.W. Board Retaining	AB
229	LANGS0014AGFP	Bracket, Speaker Retaining	AA
230	LHLDA1052AFSA	Holder, Rod Antenna	AA
231	LHLDF1203AFZZ	Bracket, Switch P.W. Board	AK
232	LHLDW9003CEZZ	Holder, Wire	AA
233	LHLDZ1066AFSB	Holder, Dial Scale Plate	AG
234	LHLDZ1067AFZZ	Bracket, Volume P.W. Board	AK
235	LHLDZ8060AFZZ	Holder, Built-in Microphone	AB
236	LX-HZ0057AFFD	Screw, Mechanism Block Retaining	
237	LX-HZ0058AFFD	Screw, Mechanism Block Retaining	
238	MLEVF0701AFZZ	Lever, REC/PB Switch	AE

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	CODE
239	MSPRC0021AFFN	Spring, Battery (–)	AA
240	MSPRC0140AFFN	Spring, Battery (–)	AB
241	MSPRP0089AGFW	Spring (Plate type), Cassette Holder	AB
242	MSPRP0132AFFW	Spring (Plate type), Cassette Holder	AC
243	MSPRP0154AFZZ	Spring (Plate type), Light Knob	AC
244	MSPRT0003AGFW	Spring, Dial Cord	AA
245	NDRM-0046AFZZ	Drum, Dial Cord	AC
246	NPLYB0050AFZZ	Pulley, Dial Cord	AA
247	NPLYB0051AFZZ	Pulley, Dial Cord	AA
248	NPLYC0102AFFW	Pulley, Dial Cord	AB
249	NSFTD0166AFFW	Shaft, Dial Cord	AE
250	PCOVW1100AFZZ	Cover, AC Socket	AD
251	PCUSG0076AF00	Cushion, Built-in Microphone	AA
252	PCUSU0092AG00	Cushion, Battery Lid	AA
253	PCUSU0128AFZZ	Cushion, Coil (L3, L4)	AA
254	PCUSU0154AF08	Cushion, Meter	AA
255	PFLT-0095AG00	Felt, Cassette Holder	AA
256	PFLT-0127AF00	Felt, Battery Compartment	AA
257	PFLT-0307AF00	Felt, Volume Cover	AA
258	PFLT-0311AF00	Felt, Switch Cover	AE
259	PGUMM0115AF00	Cushion Rubber, Cassette Holder	AA
260	PRDAR0127AFFW	Heatsink, Power IC	AB
261	PTPEC0005AG00	Ribbon, Battery Removal	
262	QANTR0105AFZZ	Rod Antenna	AP
263	QFSHD1001AGZZ	Holder, Fuse	AB
264	QJAKG0051AFZZ	Jack Assembly (J201, J202: EXT. MIC/J302: REMOTE)	AH
265	QPRBF0070AFZZ	P.W. Board, Main	
266	QPWBF0623AFZZ	P.W. Board, Volume/Switch/ Headphone/Jack	
267	QPWBF0624AFZZ	P.W. Board, Power	
268	QSOCZ2469AFZZ	Socket Assembly (SO701: AC/J701: EXT. DC)	AH
269	QTANB9102AFFN	Terminal, Battery (+)	AC
270	QTANB9103AFFN	Terminal, Battery (+)	AC
271	RMICC0057AFZZ	Built-in Microphone	AK
272	LHLDW1067AFZZ	Band, Wire	AA
273	LHLDW1068AFZZ	Band, Wire	AA
274	QLUGP0111CEFW	Lug Terminal	AA
275	QLUGP0150AFZZ	Lug Terminal	AA
276	QT1PF0001CEYW	Tip	AA
278	LANGK0186AFFW	Bracket, Mains Power Switch (GF-9090E)	
279	PZETV0052AFZZ	Shield, Mains Power Switch (GF-9090E)	
280	PCUSG0075AF00	Cushion, Back Cabinet	AB
281	PGUMM0122AF00	Cushion Rubber, Back Cabinet	
282	PFLT-0325AF00	Felt, Switch Knob	
283	LBOSD0050AFFW	Spacer, Mains Power Switch (GF-9090E)	AB
F701	QFS-C102CAGNI	Fuse, 1.0AT	AE
J201, J202	Not Available Part of 264	Jack, EXT. MIC	
J301	QJAKJ0052AFZZ	Jack, HEADPHONE	AH
J302	Not Available Part of 264	Jack, REMOTE	

REF. NO.	PART NO.	DESCRIPTION	CODE
J701	Not Available Part of 268	Jack, EXT. DC (DC 12V)	
ME1	RMTRL0133AFSB	Meter, VU-BATTERY	AT
ME2	RMTRL0132AFSB	Meter, VU-TUNING	AT
PG2	QCNCM102FAFZZ	Plug, 6 Pin	AC
PG501	QCNCM105JAFZZ	Plug, 9 Pin	AD
PL1, PL2	RLMPM0054AFZZ	Lamp, Dial/Meter	AE
SOL501	RPLU-0053AFZZ	Plunger	AM
SO1	QSOCJ2460AFZZ	Socket, FM EXT. ANT	AD
SO2	QCNW-0221AFZZ	Socket, 6 Pin	AH
SO202	QSOCD2554AFZZ	Socket, DIN Type Record/ Playback	AF
SO301, SO302	QSOCD2268AFZZ	Socket, EXT.SP	AE
SO501	QCNCW096JAFZZ	Socket, 9 Pin	AC
SO701	Not Available, Part of 268	Socket, Mains Supply (AC)	
SP1, SP2	VSP0016PB204A	Speaker, Woofer	AW
SP3, SP4	VSP00HNT-074A	Speaker, Horn Type Tweeter	AM
SW101 (A~G)	QSW-P0147AFZZ	Push Switch Assembly A (a~f): LW B (a~f): MW C (a~f): SW D (a~f): FM E (a, b): AFC F (a, b): MUTING G (a~h): FUNCTION	AV
SW201 (A~P)	QSW-S0197AFZZ	Switch, Record/Playback	AM
SW202 (A~D)	QSW-B0087AFZZ	Switch, ALC/MANUAL	AG
SW203 (A~D)	QSW-B0087AFZZ	Switch, Equalizer	AG
SW204 (A, B)	QSW-P0135AFZZ	Switch, EDITOR	AF
SW301 (A, B)	QSW-B0086AFZZ	Switch, LOUDNESS	AF
SW302 (A~D)	QSW-B0087AFZZ	Switch, METER	AG
SW303 (A~D)	QSW-B0076AFZZ	Switch, MODE	AG
SW304	QSW-F0107AFZZ	Switch, Dial/Meter Lamp	AC
SW501	QSW-F0106AFZZ	Switch, Forward APSS	AD
SW502	QSW-F0106AFZZ	Switch, Reverse APSS	AD
SW503	QSW-M0055AFZZ	F.F/REW Muting	AG
SW504	QSW-F0044AGZZ	Switch, Motor	AE
SW601	QSW-S0191AFZZ	Switch, RIF	AE
SW602 (A, B)	QSW-B0086AFZZ	Switch, Bias Selector	AF
SW701	QSOCE0551AFZZ	Switch, Mains Voltage Selector (GF-9090H, HB)	AG
	QSW-S0176AFZZ	Switch, AC Power (GF-9090E)	AP
	QACCK0050AFZZ	Cord, Mains Supply (AC) (GF-9090H, HB)	AM
	QACCB0003AG0V	Cord, Mains Supply (AC) (GF-9090E)	AL
	QPLGZ0152AFZZ	Plug, Erase	AB
	RTPEK0057AFZZ	Cassette Tape	AG

DIFFERENCE OF PARTS LIST

○ : Same as GF-9090H

REF. NO.	PART NO.			DESCRIPTION
	GF-9090H	GF-9090HB	GF-9090E	
T701	RTRNP0504AFZZ	○	RTRNP0509AFZZ	Transformer, power
201	GCABA1451AFSA	GCABA1461AFSA	GCABA1452AFSA	Cabinet, Front
205	GFTAC1069AFSA	GFTAC1074AFSA	○	Holder, Cassette
206	GWAKP9003AFSA	GWAKP9003AFSB	○	Cabinet, Operation
208	HDECA0275AFSA	HDECQ0068AFSA	○	Decoration Ring, Woofer
209	HDECA0276AFSA	HDECA0276AFSB	○	Plate, Operation
212	HINDM1153AFSA	HINDM1177AFSA	HINDM1160AFSA	Indication Metal, Model Spec.
213	HINDM1154AFSA	○	HINDM1161AFSA	Indication Metal, Mains Switch
217	HPNC-0107AFSA	HPNC-0110AFSA	○	Punching Metal, Woofer
219	JHNDG1055AFSA	JHNDG1055AFSB	○	Handle
220	JKNBM0249AFSA	JKNBM0249AFSB	○	Knob, Push Switch (BAND, AFC, MUTING)
221	JKNBM0253AFSA	JKNBM0253AFSB	○	Knob, Push Switch (TAPE/RADIO)
223	JKNBP0073AFSA	JKNBP0073AFSB	○	Knob, VOLUME/ BALANCE/TREBLE/BASS/ RECORD
224	JKNBZ0108AFSA	JKNBZ0108AFSB	○	Knob, LIGHT
225	JKNBZ0109AFSA	JKNBZ0109AFSC	○	Knob, MODE/TAPE selector/ ALC/LOUDNESS/METER
226	JKNBZ0127AFSB	JKNBZ0127AFSC	○	Knob, EDIT
262	QANTR0105AFZZ	QANTR0107AFZZ	○	Rod, Antenna
278	---	---	LANGK0186AFFW	Bracket, Mains Power Switch
279	---	---	PZETV0052AFZZ	Shield, Mains Power Switch
283	---	---	LBOSD0050AFFW	Spacer, Mains Power Switch
SW701	QSOCE0551AFZZ	○	QSW-S0176AFZZ	Switch, Mains
	QACCK0050AFZZ	○	QACCB0003AG0V	Cord, Mains Supply (AC)

--- : Not Used

A7706-2.7MNK
Printed in Japan